



**MODEL:
PM-PV-N4551/D5251**

**PCI-104 with Intel® Atom™ Processor N455/D525,
Ethernet, USB, Audio, RS-232, RS-422/485, SATA,
LVDS, CompactFlash®, RoHS Compliant**

User Manual

Revision

| Date | Version | Changes |
|-----------------|---------|--|
| August 11, 2016 | 1.02 | -- Modified Figure 3-10: LAN Connector Location -- Deleted N4251 model information |
| June 10, 2013 | 1.01 | -- Updated Figure 3-13: PCI-104 Connector Location -- Modified Table 3-4: CompactFlash® Slot Pinouts, Table 3-6: Fan Connector Pinouts, Table 3-16: Serial Port Connector Pinouts (COM2) -- Added Section 3.2.8: LAN Connector |
| May 24, 2011 | 1.00 | Initial release |

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions



WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.



HOT SURFACE

This symbol indicates a hot surface that should not be touched without taking care.

Table of Contents

| | |
|--|-----------|
| 1 INTRODUCTION..... | 1 |
| 1.1 INTRODUCTION..... | 2 |
| 1.2 APPLICATIONS | 2 |
| 1.3 BENEFITS | 2 |
| 1.4 FEATURES..... | 3 |
| 1.5 OVERVIEW..... | 4 |
| 1.6 CONNECTORS | 5 |
| 1.7 DIMENSIONS..... | 6 |
| 1.8 DATA FLOW | 8 |
| 1.9 TECHNICAL SPECIFICATIONS | 9 |
| 2 UNPACKING | 11 |
| 2.1 ANTI-STATIC PRECAUTIONS | 12 |
| 2.2 UNPACKING PRECAUTIONS..... | 12 |
| 2.3 PACKING LIST..... | 13 |
| 2.4 OPTIONAL ITEMS | 14 |
| 3 CONNECTORS | 15 |
| 3.1 PERIPHERAL INTERFACE CONNECTORS..... | 16 |
| 3.1.1 <i>Layout</i> | 16 |
| 3.1.2 <i>Peripheral Interface Connectors</i> | 17 |
| 3.2 INTERNAL PERIPHERAL CONNECTORS | 18 |
| 3.2.1 <i>ATX Power Control Connector</i> | 18 |
| 3.2.2 <i>Audio Kit Connector</i> | 19 |
| 3.2.3 <i>CompactFlash® Slot</i> | 19 |
| 3.2.4 <i>Digital I/O Connector</i> | 21 |
| 3.2.5 <i>Fan Connector</i> | 22 |
| 3.2.6 <i>Front Panel Connector</i> | 23 |
| 3.2.7 <i>Keyboard/Mouse Connector</i> | 24 |
| 3.2.8 <i>LAN Connector</i> | 25 |
| 3.2.9 <i>LVDS LCD Connector</i> | 26 |

| | |
|---|-----------|
| 3.2.10 LVDS Backlight Inverter Connector | 27 |
| 3.2.11 PCI-104 Connector | 27 |
| 3.2.12 Power Connector | 29 |
| 3.2.13 SATA Drive Connectors | 30 |
| 3.2.14 Serial Port Connector (RS-232)..... | 31 |
| 3.2.15 Serial Port Connector (RS-232/422/485) | 32 |
| 3.2.16 USB Connector | 33 |
| 3.2.17 VGA Connector..... | 33 |
| 4 INSTALLATION | 35 |
| 4.1 ANTI-STATIC PRECAUTIONS | 36 |
| 4.2 INSTALLATION CONSIDERATIONS..... | 37 |
| 4.2.1 Installation Notices | 37 |
| 4.2.2 Installation Checklist | 38 |
| 4.3 UNPACKING..... | 39 |
| 4.4 SO-DIMM INSTALLATION | 40 |
| 4.5 COMPACTFLASH® CARD INSTALLATION | 40 |
| 4.6 JUMPER SETTINGS | 41 |
| 4.6.1 AT/ATX Power Mode Jumper | 42 |
| 4.6.2 Clear CMOS Jumper..... | 43 |
| 4.6.3 CompactFlash® Setup..... | 44 |
| 4.6.4 LVDS Voltage Selection..... | 44 |
| 4.6.5 PCI-104 Voltage Setup..... | 45 |
| 4.6.6 COM 2 Function Select Jumper..... | 46 |
| 4.7 CHASSIS INSTALLATION..... | 47 |
| 4.8 INTERNAL PERIPHERAL DEVICE CONNECTIONS..... | 48 |
| 4.8.1 Keyboard/Mouse Y-cable Connector | 48 |
| 4.8.2 LVDS LCD Installation..... | 49 |
| 4.8.3 SATA Drive Connection | 51 |
| 4.8.4 USB Cable..... | 53 |
| 4.9 SOFTWARE INSTALLATION | 54 |
| 5 BIOS..... | 56 |
| 5.1 INTRODUCTION..... | 57 |
| 5.1.1 Starting Setup..... | 57 |

| | | |
|----------|---|------------|
| 5.1.2 | Using Setup | 57 |
| 5.1.3 | Getting Help..... | 58 |
| 5.1.4 | Unable to Reboot After Configuration Changes..... | 58 |
| 5.1.5 | BIOS Menu Bar..... | 58 |
| 5.2 | MAIN..... | 59 |
| 5.3 | ADVANCED..... | 60 |
| 5.3.1 | ACPI Settings..... | 60 |
| 5.3.2 | CPU Configuration..... | 61 |
| 5.3.3 | SATA Configuration | 63 |
| 5.3.4 | USB Configuration..... | 64 |
| 5.3.5 | Super IO Configuration | 65 |
| 5.3.5.1 | Serial Port n Configuration | 66 |
| 5.3.6 | H/W Monitor | 69 |
| 5.3.7 | Serial Port Console Redirection | 72 |
| 5.4 | CHIPSET | 73 |
| 5.4.1 | Host Bridge Configuration | 74 |
| 5.4.1.1 | OnChip VGA Configuration..... | 75 |
| 5.4.2 | South Bridge Configuration..... | 76 |
| 5.4.3 | Intel IGD SWSCI OpRegion..... | 77 |
| 5.5 | BOOT..... | 79 |
| 5.6 | SECURITY..... | 80 |
| 5.7 | EXIT | 82 |
| A | REGULATORY COMPLIANCE | 84 |
| B | PRODUCT DISPOSAL | 86 |
| C | BIOS OPTIONS | 88 |
| D | TERMINOLOGY | 91 |
| E | DIGITAL I/O INTERFACE | 95 |
| E.1 | INTRODUCTION | 96 |
| E.2 | ASSEMBLY LANGUAGE SAMPLE 1 | 97 |
| E.3 | ASSEMBLY LANGUAGE SAMPLE 2 | 97 |
| F | WATCHDOG TIMER..... | 98 |
| G | HAZARDOUS MATERIALS DISCLOSURE | 101 |

List of Figures

| | |
|--|----|
| Figure 1–1: PM-PV-N4551/D5251 | 2 |
| Figure 1-2: Overview | 4 |
| Figure 1-3: Solder Side Overview | 4 |
| Figure 1-4: Dimensions (Top)..... | 6 |
| Figure 1-5: Dimensions (I/O)..... | 6 |
| Figure 1-6: Dimensions (Bottom)..... | 7 |
| Figure 1-7: Data Flow Block Diagram | 8 |
| Figure 3-1: Connector and Jumper Locations (Front Side) | 16 |
| Figure 3-2: Connector and Jumper Locations (Solder Side) | 16 |
| Figure 3-3: ATX Power Supply Enable Connector Location | 18 |
| Figure 3-4: Audio Kit Connector Location | 19 |
| Figure 3-5: CompactFlash® Slot Location..... | 20 |
| Figure 3-6: Digital I/O Connector Locations | 21 |
| Figure 3-7: Fan Connector Location..... | 22 |
| Figure 3-8: Front Panel Connector Location | 23 |
| Figure 3-9: Keyboard/Mouse Connector Location | 24 |
| Figure 3-10: LAN Connector Location..... | 25 |
| Figure 3-11: LVDS Connector Location..... | 26 |
| Figure 3-12: Backlight Inverter Connector Location..... | 27 |
| Figure 3-13: PCI-104 Connector Location | 28 |
| Figure 3-14: Power Connector Location | 29 |
| Figure 3-15: SATA Drive Connector Location | 30 |
| Figure 3-16: Serial Port Connector Location (COM1) | 31 |
| Figure 3-17: Serial Port Connector Location (COM2) | 32 |
| Figure 3-18: USB Connector Pinout Locations | 33 |
| Figure 3-19: VGA Connector Location | 34 |
| Figure 4-1: SO-DIMM Installation | 40 |
| Figure 4-2: CompactFlash® Card Installation | 41 |
| Figure 4-3: AT/ATX Power Mode Jumper Location..... | 43 |
| Figure 4-4: Clear BIOS Jumper Location | 43 |

PM-PV-N4551/D5251 User Manual

| | |
|---|----|
| Figure 4-5: CompactFlash® Setup Jumper Location | 44 |
| Figure 4-6: LVDS Voltage Selection Jumper Locations | 45 |
| Figure 4-7: PCI-104 Voltage Jumper Location..... | 46 |
| Figure 4-8: COM 2 Function Select Jumper Location..... | 47 |
| Figure 4-9: Keyboard/mouse Y-cable Connection | 49 |
| Figure 4-10: LVDS Connector..... | 50 |
| Figure 4-11: Backlight Inverter Connection..... | 51 |
| Figure 4-12: SATA Drive Cable Connection..... | 52 |
| Figure 4-13: SATA Power Drive Connection..... | 52 |
| Figure 4-14: Dual USB Cable Connection | 53 |
| Figure 4-15: Introduction Screen | 54 |
| Figure 4-16: Available Drivers | 55 |

List of Tables

| | |
|--|----|
| Table 1-1: Technical Specifications..... | 10 |
| Table 2-1: Package List Contents | 14 |
| Table 2-2: Optional Packing List Items..... | 14 |
| Table 3-1: Internal Peripheral Connectors | 17 |
| Table 3-2: ATX Power Supply Enable Connector Pinouts | 18 |
| Table 3-3: Audio Kit Connector Pinouts..... | 19 |
| Table 3-4: CompactFlash® Slot Pinouts | 21 |
| Table 3-5: Digital I/O Connector Pinouts..... | 22 |
| Table 3-6: Fan Connector Pinouts | 22 |
| Table 3-7: Front Panel Connector Pinouts..... | 23 |
| Table 3-8: Keyboard/Mouse Connector Pinouts | 24 |
| Table 3-9: LAN Connector Pinouts | 25 |
| Table 3-10: LVDS Connector Pinouts..... | 26 |
| Table 3-11: Backlight Inverter Connector Pinouts | 27 |
| Table 3-12: PCI-104 Connector Pinouts | 29 |
| Table 3-13: Power Connector Pinouts..... | 30 |
| Table 3-14: SATA Drive Connector Pinouts..... | 30 |
| Table 3-15: Serial Port Connector Pinouts (COM1)..... | 31 |
| Table 3-16: Serial Port Connector Pinouts (COM2)..... | 32 |
| Table 3-17: USB Port Connector Pinouts..... | 33 |
| Table 3-18: VGA Connector Pinouts..... | 34 |
| Table 4-1: Jumper Settings..... | 42 |
| Table 4-2: AT/ATX Power Mode Jumper Settings | 42 |
| Table 4-3: Clear BIOS Jumper Settings..... | 43 |
| Table 4-4: CompactFlash® Setup Jumper Settings..... | 44 |
| Table 4-5: LVDS Voltage Selection Jumper Settings..... | 45 |
| Table 4-6: PCI-104 Voltage Jumper Settings | 46 |
| Table 4-7: COM 2 Function Select Jumper Settings | 46 |
| Table 5-1: BIOS Navigation Keys | 58 |

BIOS Menus

| | |
|--|----|
| BIOS Menu 1: Main | 59 |
| BIOS Menu 2: Advanced | 60 |
| BIOS Menu 3: ACPI Settings | 61 |
| BIOS Menu 4: CPU Configuration | 62 |
| BIOS Menu 5: IDE Configuration | 63 |
| BIOS Menu 6: USB Configuration | 64 |
| BIOS Menu 7: Super IO Configuration..... | 65 |
| BIOS Menu 8: Serial Port n Configuration Menu..... | 66 |
| BIOS Menu 9: Hardware Health Configuration | 69 |
| BIOS Menu 10: Serial Port Console Redirection | 72 |
| BIOS Menu 11: Chipset | 73 |
| BIOS Menu 12: Host Bridge Chipset Configuration..... | 74 |
| BIOS Menu 13: OnChip VGA Configuration..... | 75 |
| BIOS Menu 14:South Bridge Chipset Configuration..... | 76 |
| BIOS Menu 15:South Bridge Chipset Configuration..... | 78 |
| BIOS Menu 16: Boot | 79 |
| BIOS Menu 17: Security | 81 |
| BIOS Menu 18:Exit..... | 82 |

Chapter

1

Introduction

1.1 Introduction



Figure 1–1: PM-PV-N4551/D5251

The PCI-104 form factor PM-PV-N4551/D5251 is a highly integrated embedded computer specifically optimized for multi-media applications requiring minimum installation space. The PM-PV-N4551/D5251 is particularly suitable for low power and fan-less applications. The PM-PV-N4551/D5251 supports a full range of functions for an AT compatible industrial computer in a space-saving 96 mm x 100 mm profile. The PM-PV-N4551/D5251 is equipped with an on-board low-power consumption and high performance Intel® Atom™ D525 or N455 processor. It also supports a single 204-pin 667/800 MHz DDR3 SO-DIMM (up to 2 GB).

1.2 Applications

The PM-PV-N4551/D5251 has been designed for use in industrial applications where board expansion is critical and operational reliability is essential.

1.3 Benefits

Some of the PM-PV-N4551/D5251 benefits include,

- Operating reliably in harsh industrial environments with ambient temperatures ranging from -20°C ~ 60°C
- Rebooting automatically if the BIOS watchdog timer detects that the system is no longer operating

1.4 Features

Some of the PM-PV-N4551/D5251 motherboard features are listed below:

- Complies with RoHS
- Embedded Intel® Atom™ D525 or N455 processor
- Supports a single 204-pin 667/800 MHz DDR3 SO-DIMM (up to 2 GB)
- I/O support
 - 4 x USB 2.0
 - 1 x SATA 3Gb/s
 - 1 x RS-232
 - 1 x RS-232/422/485
 - 1 x CompactFlash® card slot
 - 1 x PS/2 for keyboard and mouse
- Supports LVDS 18-bit single-channel up to 1366 x 768 and VGA up to 2048 x 1536 @ 60 MHz

1.5 Overview

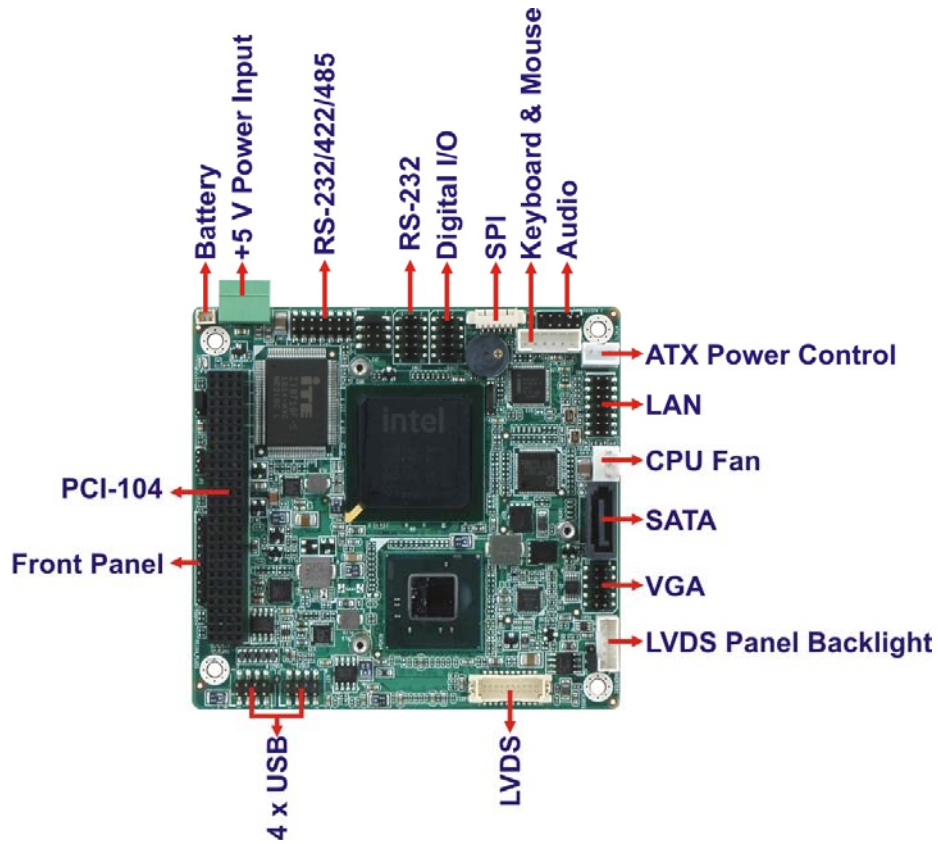


Figure 1-2: Overview

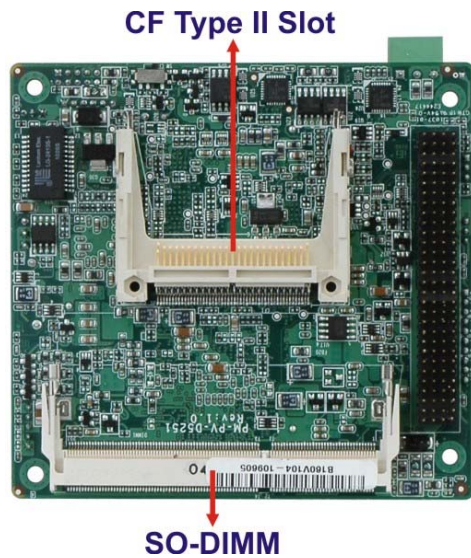


Figure 1-3: Solder Side Overview

1.6 Connectors

The PM-PV-N4551/D5251 has the following connectors on-board (described in **Chapter 3**):

- 1 x ATX Power Control Connector
- 1 x Audio Kit Connector
- 1 x CompactFlash® Slot
- 1 x Digital I/O Connector
- 1 x Fan Connector
- 1 x Front Panel Connector
- 1 x Keyboard/Mouse Connector
- 1 x LAN Connector
- 1 x LVDS LCD Connector
- 1 x LVDS Backlight Inverter Connector
- 1 x PCI-104 Connector
- 1 x Power Connector
- 1 x SATA Drive Connectors
- 1 x Serial Port Connector (RS-232)
- 1 x Serial Port Connector (RS-232/422/485)
- 2 x USB Connector
- 1 x VGA Connector

1.7 Dimensions

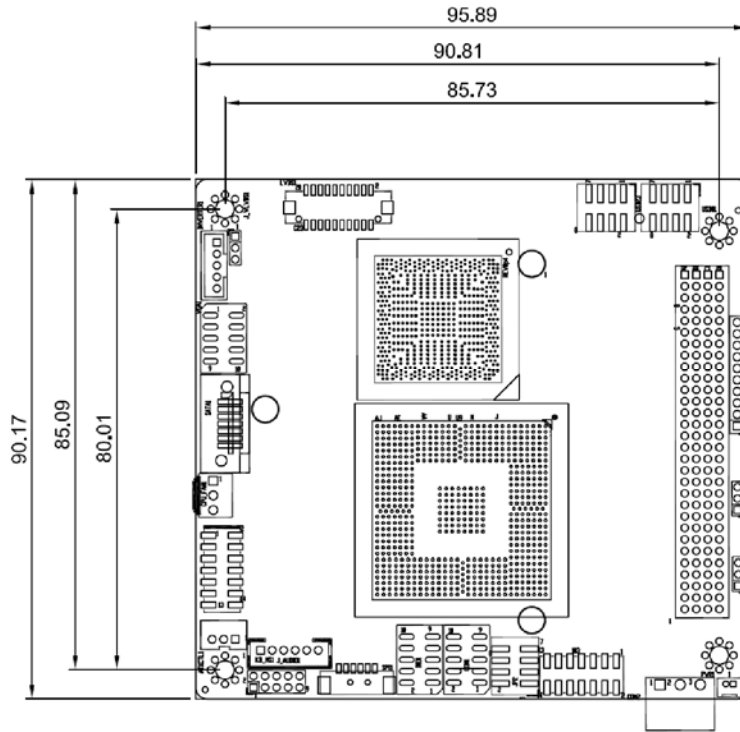


Figure 1-4: Dimensions (Top)

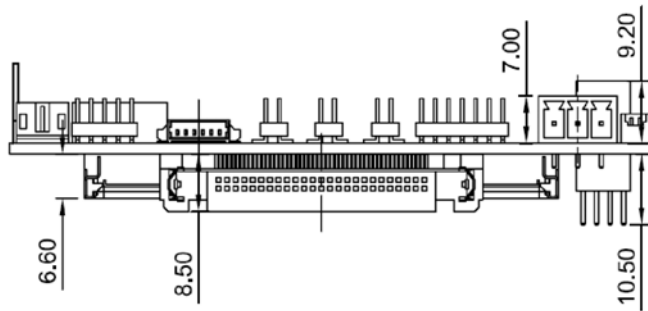


Figure 1-5: Dimensions (I/O)

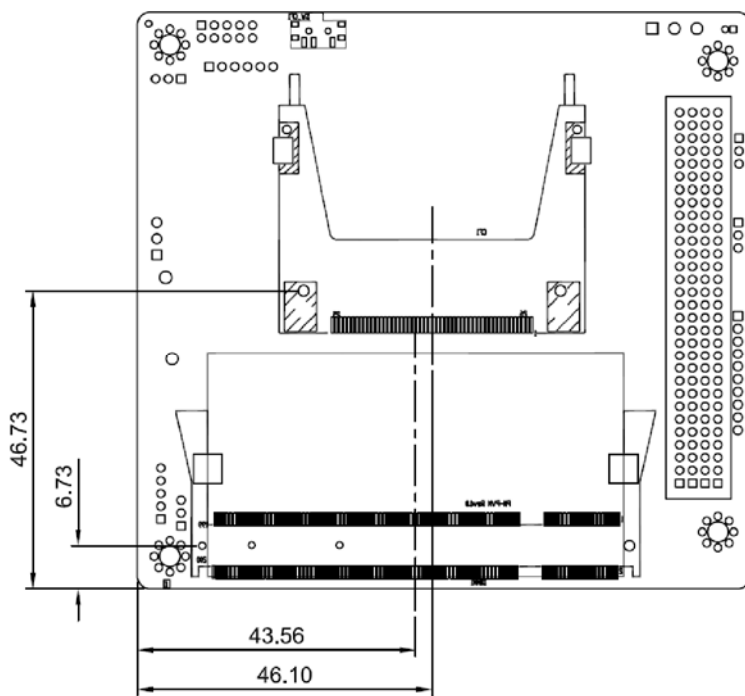


Figure 1-6: Dimensions (Bottom)

1.8 Data Flow

The data flow diagram for the PM-PV-N4551/D5251 is shown below.

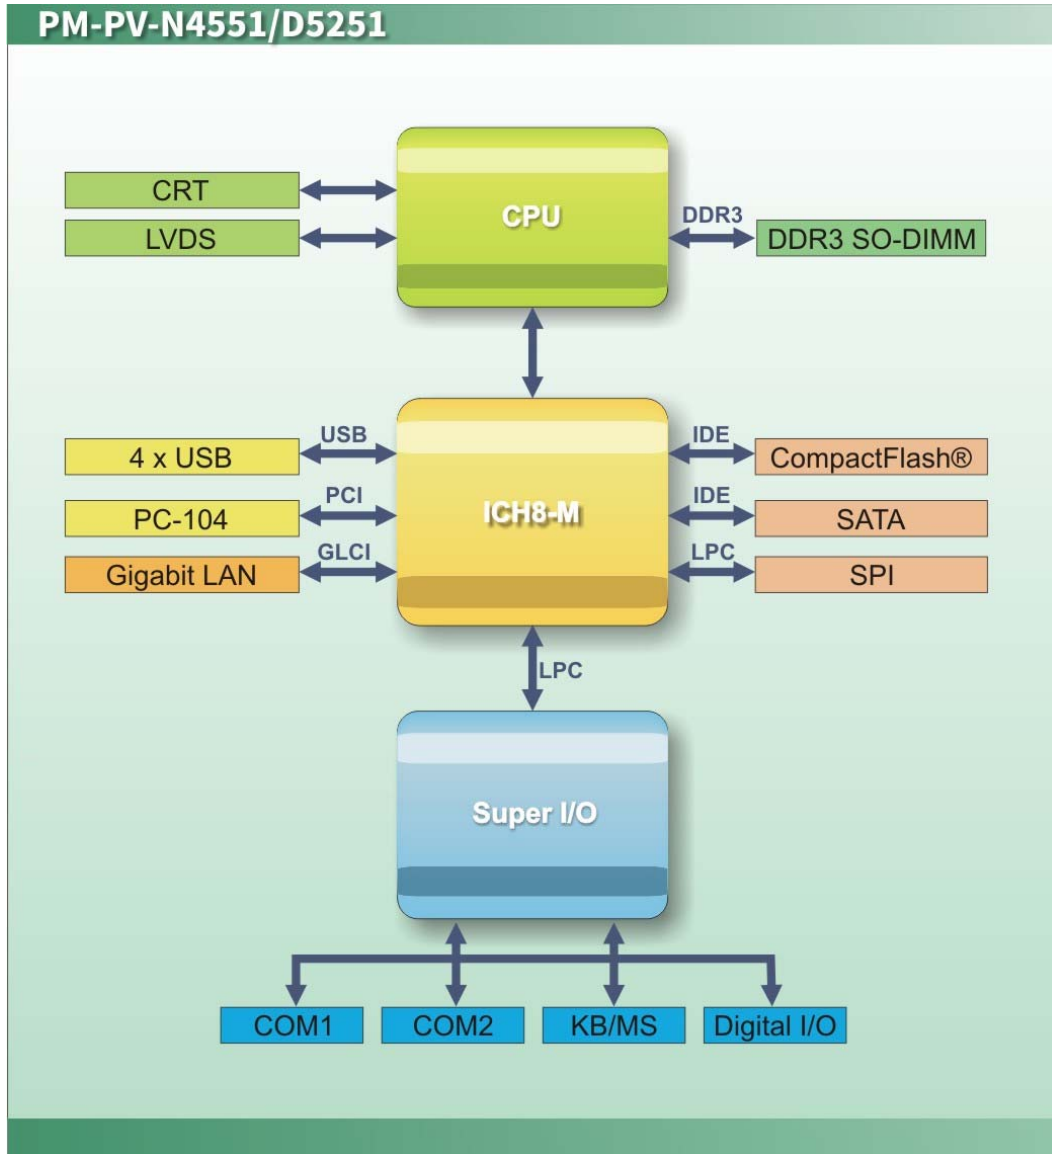


Figure 1-7: Data Flow Block Diagram

1.9 Technical Specifications

PM-PV-N4551/D5251 technical specifications are listed in the table below.

| Specification/Model | Description |
|--------------------------------------|---|
| Form Factor | PCI-104 |
| CPU Options | Intel® Atom™ processor D525, 1.8 GHz/1 MB L2 cache Intel® Atom™ processor D455, 1.66 GHz/512 KB L2 cache |
| Integrated Graphics | Intel® ICH8M |
| Memory | 204-pin 667/800 MHz DDR3 SO-DIMM (up to 2 GB) |
| System Controller Hub Chipset | Intel® ICH8M |
| BIOS | AMI |
| Digital I/O | 8-bit digital I/O (4-bit input, 4-bit output) |
| Ethernet Controller | Intel® 82567V GbE |
| Super I/O Controller | iTE IT8718F |
| Watchdog Timer | Software programmable supports 1~255 sec. system reset |
| PCI | One PCI-104 |
| Audio | HD audio interface |
| Display | LVDS: 18-bit single-channel up to 1366 x 768 VGA: up to 2048 x 1536 @ 60 MHz |
| Ethernet | Intel® 82567V GbE |
| Connectors | 4 x USB 1 x SATA 3gb/s 1 x RS-232 1 x RS-232/422/485 1 x CompactFlash® card slot 1 x PS/2 for keyboard and mouse |
| Power Supply | 5 V only, AT/ATX support |
| Power Consumption | 3.31 A @ 5 V, 0.09 @ 12 V, 0.03 A @ 5 Vsb (1.8 GHz Intel® Atom™ D525 with 1 GB 800 MHz DDR3) |

| Specification/Model | Description |
|------------------------------|--|
| Operating temperature | -20°C~60°C without cooler, -20°C~70°C with forced air for D525 processor -20°C~70°C without cooler, -20°C~75°C with forced air for N455 processor |
| Humidity | 5% ~ 95% non-condensing |
| Dimensions | 96 mm x 100 mm |
| Weight GW/NW | 600 g / 170 g |

Table 1-1: Technical Specifications

Chapter

2

Unpacking

2.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation may result in permanent damage to the product and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the PM-PV-N4551/D5251. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the PM-PV-N4551/D5251 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the PM-PV-N4551/D5251, place it on an anti-static pad. This reduces the possibility of ESD damaging the PM-PV-N4551/D5251.
- **Only handle the edges of the PCB:** When handling the PCB, hold the PCB by the edges.

2.2 Unpacking Precautions

When the PM-PV-N4551/D5251 is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 2.1**.
- Make sure the packing box is facing upwards so the PM-PV-N4551/D5251 does not fall out of the box.
- Make sure all the components shown in the unpacking section are present.







2.3 Packing List



NOTE:

If some of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the PM-PV-N4551/D5251 from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@ieiworld.com.

The PM-PV-N4551/D5251 is shipped with the following components:

| Quantity | Item and Part Number | Image |
|----------|---|---|
| 1 | PM-PV-N4551/D5251 |  |
| 1 | Serial port cable (P/N: 32205-002700-200-RS) |  |
| | SATA cable (P/N: 32801-000703-500-RS) |  |
| 1 | Dual USB cable (wo bracket) (P/N: 32001-008600-200-RS) |  |
| 1 | Keyboard/Mouse cable (P/N: 32000-023800-RS) |  |
| 1 | LAN cable (P/N: 32013-000400-200-RS) |  |






| Quantity | Item and Part Number | Image |
|----------|---------------------------------------|---|
| 1 | Power cable (P/N: 32000-130300-RS) |  |
| 1 | VGA cable (P/N:32000-033804-RS) |  |
| 1 | Mini jumper pack |  |
| 1 | Quick Installation Guide |  |
| 1 | Utility CD |  |

Table 2-1: Package List Contents

2.4 Optional Items




| Item and part number | Image |
|---|---|
| SATA power cable (P/N: 32102-000100-200-RS) |  |
| RS-232/422/485 cable (P/N: 32200-026500-RS) |  |
| 7.1 channel HD audio kit with Realtek ALC883 codec (P/N: AC-KIT-892HD-R10) |  |

Table 2-2: Optional Packing List Items

Chapter

3

Connectors

3.1 Peripheral Interface Connectors

The locations of the peripheral interface connectors are shown below.

3.1.1 Layout

Figure 3-1 shows the on-board peripheral connectors and jumpers on the front side of the board.

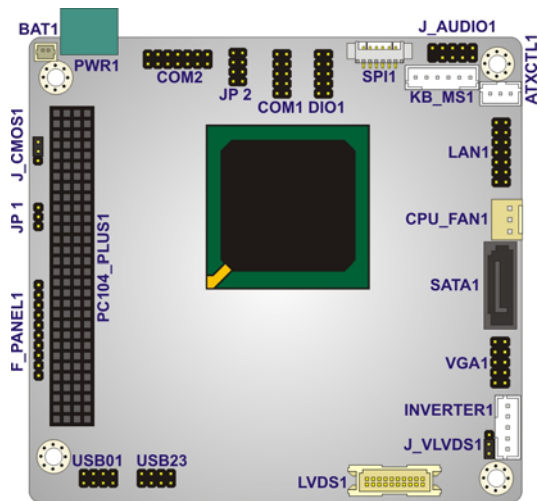


Figure 3-1: Connector and Jumper Locations (Front Side)

Figure 3-2 shows the onboard peripheral connectors on the solder side of the board.

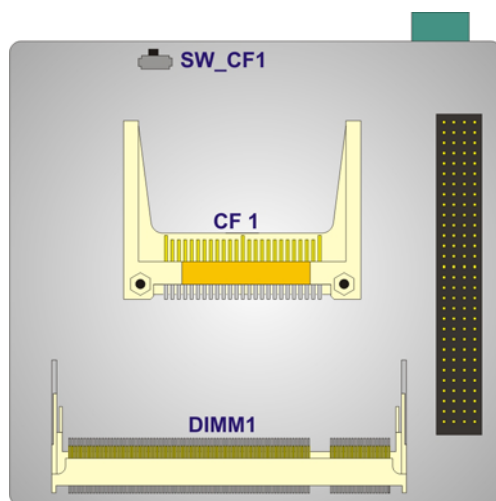


Figure 3-2: Connector and Jumper Locations (Solder Side)

3.1.2 Peripheral Interface Connectors

The table below shows a list of the peripheral interface connectors on the PM-PV-N4551/D5251. Detailed descriptions of these connectors can be found in the following section.

| Connector | Type | Label |
|--|--------------------------------|--------------|
| ATX Power Control Connector | 3-pin wafer | ATXCTL1 |
| Audio Kit Connector | 9-pin header | J_AUDIO1 |
| CompactFlash® Slot | CompactFlash® card slot | CF1 |
| Digital I/O Connector | 10-pin header | DIO1 |
| Fan Connector | 3-pin wafer | CPU_FAN1 |
| Front Panel Connector | 10-pin header | F_PANEL1 |
| Keyboard/Mouse Connector | 6-pin wafer | KB_MS1 |
| LAN Connector | 14-pin header | LAN1 |
| LVDS LCD Connector | 20-pin crimp | LVDS1 |
| LVDS Backlight Inverter Connector | 5-pin wafer | INVERTER1 |
| PCI-104 Connector | PCI-104 connector | PC104_PLUS1 |
| Power Connector | 3-pin terminal block connector | PWR1 |
| SATA Drive Connectors | 7-pin SATA drive connectors | SATA1 |
| Serial Port Connector (RS-232) | 10-pin header | COM1 |
| Serial Port Connector (RS-232/422/485) | 14-pin header | COM2 |
| USB Connector | 8-pin header | USB01, USB23 |
| VGA Connector | 10-pin header | VGA1 |

Table 3–1: Internal Peripheral Connectors

3.2 Internal Peripheral Connectors

Internal peripheral connectors on the motherboard are only accessible when the motherboard is outside of the chassis. This section has complete descriptions of all the internal, peripheral connectors on the PM-PV-N4551/D5251.

3.2.1 ATX Power Control Connector

- CN Label:** ATXCTL1
- CN Type:** 3-pin wafer (1x3)
- CN Location:** See **Figure 3-3**
- CN Pinouts:** See **Table 3-2**

The connector is for enabling an ATX power supply. When connected to the power supply, the power can be turned on and off with the front panel switch.

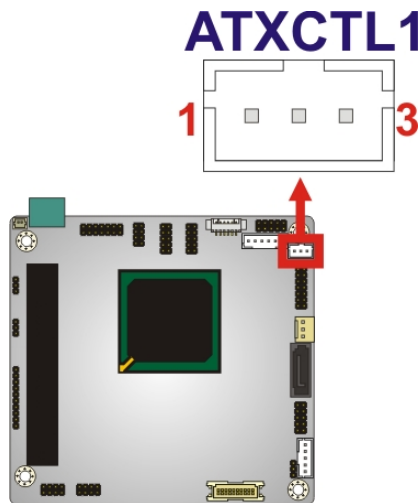


Figure 3-3: ATX Power Supply Enable Connector Location

| Pin | Description |
|-----|-------------|
| 1 | 5VSB |
| 2 | GND |
| 3 | PS_ON# |

Table 3-2: ATX Power Supply Enable Connector Pinouts

3.2.2 Audio Kit Connector

- CN Label:** J_AUDIO1
- CN Type:** 9-pin header (2x5)
- CN Location:** See **Figure 3-4**
- CN Pinouts:** See **Table 3-3**

This connector connects to an external audio kit.

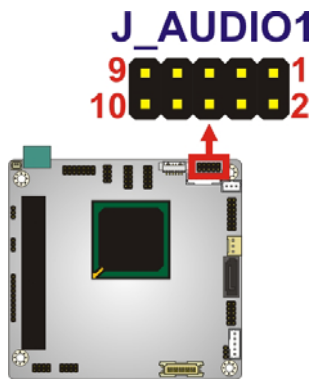


Figure 3-4: Audio Kit Connector Location

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | SYNC | 2 | BITCLK |
| 3 | SDOUT | 4 | PCBEEP |
| 5 | SDIN | 6 | RST# |
| 7 | VCC | 8 | GND |
| 9 | +12 V | 10 | GND |

Table 3-3: Audio Kit Connector Pinouts

3.2.3 CompactFlash® Slot

- CN Label:** CF1
- CN Type:** CompactFlash® card slot
- CN Location:** See **Figure 3-5**
- CN Pinouts:** See **Table 3-4**

A CompactFlash® Type I/II card can be used in this slot.

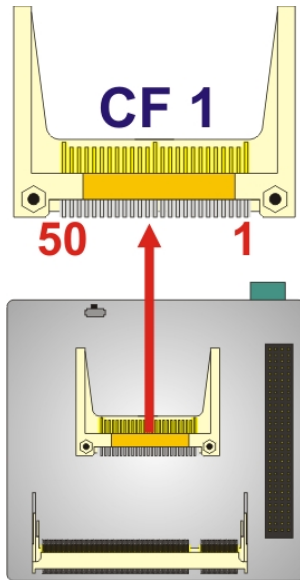


Figure 3-5: CompactFlash® Slot Location

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | GND | 26 | CD1# |
| 2 | D3 | 27 | D11 |
| 3 | D4 | 28 | D12 |
| 4 | D5 | 29 | D13 |
| 5 | D6 | 30 | D14 |
| 6 | D7 | 31 | D15 |
| 7 | CE# | 32 | CE2# |
| 8 | GND | 33 | N/C |
| 9 | GND | 34 | IOR# |
| 10 | GND | 35 | IOW# |
| 11 | GND | 36 | WE# |
| 12 | GND | 37 | IRQ14 |
| 13 | VCC | 38 | VCC |
| 14 | GND | 39 | CSEL# |
| 15 | GND | 40 | N/C |
| 16 | GND | 41 | RESET# |

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 17 | GND | 42 | IDE_IORDY# |
| 18 | A2 | 43 | IDE_REQ |
| 19 | A1 | 44 | IDE_DACK# |
| 20 | A0 | 45 | BVD2 |
| 21 | D0 | 46 | BVD1 |
| 22 | D1 | 47 | D8 |
| 23 | D2 | 48 | D9 |
| 24 | N/C | 49 | D10 |
| 25 | CD2# | 50 | GND |

Table 3-4: CompactFlash® Slot Pinouts

3.2.4 Digital I/O Connector

- CN Label:** DIO1
- CN Type:** 10-pin header (2x5)
- CN Location:** See Figure 3-6
- CN Pinouts:** See Table 3-5

The digital I/O connector provides programmable input and output for external devices. The digital I/O provides 4-bit output and 4-bit input.

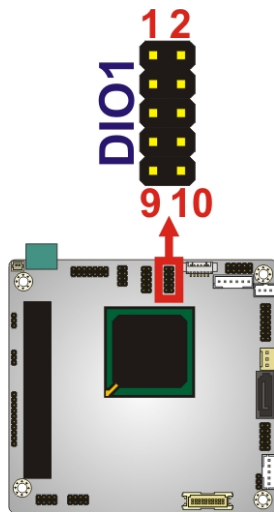


Figure 3-6: Digital I/O Connector Locations

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | GND | 2 | VCC |
| 3 | Output 3 | 4 | Output 2 |
| 5 | Output 1 | 6 | Output 0 |
| 7 | Input 3 | 8 | Input 2 |
| 9 | Input 1 | 10 | Input 0 |

Table 3-5: Digital I/O Connector Pinouts

3.2.5 Fan Connector

- CN Label:** CPU_FAN1
- CN Type:** 3-pin wafer (1x3)
- CN Location:** See **Figure 3-7**
- CN Pinouts:** See **Table 3-6**

The fan connector attaches to a cooling fan.

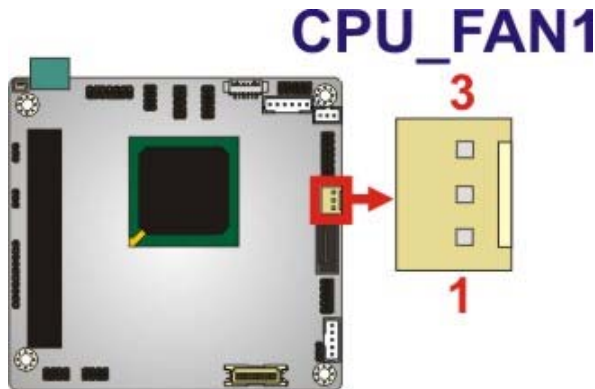


Figure 3-7: Fan Connector Location

| Pin | Description |
|-----|-------------|
| 1 | GND |
| 2 | +12V (PWM) |
| 3 | FANIO1 |

Table 3-6: Fan Connector Pinouts

3.2.6 Front Panel Connector

- CN Label:** F_PANEL1
- CN Type:** 10-pin header (1x10)
- CN Location:** See **Figure 3-8**
- CN Pinouts:** See **Table 3-7**

The front panel connector connects to the indicator LEDs and buttons on the computer's front panel.

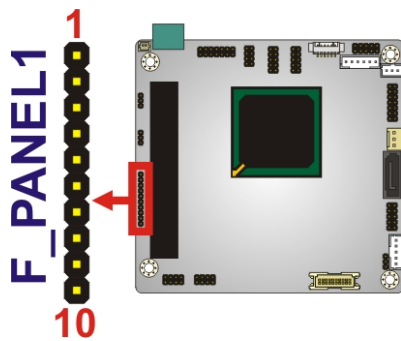


Figure 3-8: Front Panel Connector Location

| Function | Pin | Description |
|----------------|-----|-------------|
| 5 V | 1 | VCC |
| | 2 | LED- |
| Power LED | 3 | PWR_LED+ |
| | 4 | PWR_LED- |
| Hard drive LED | 5 | HDD_LED+ |
| | 6 | HDD_LED- |
| Power Button | 7 | PWR_BTN+ |
| | 8 | PWR_BTN- |
| Reset | 9 | RESET+ |
| | 10 | RESET- |

Table 3-7: Front Panel Connector Pinouts

3.2.7 Keyboard/Mouse Connector

- CN Label:** KB_MS1
- CN Type:** 6-pin wafer (1x6)
- CN Location:** See **Figure 3-9**
- CN Pinouts:** See **Table 3-8**

The keyboard/mouse connector connects to a PS/2 Y-cable that can be connected to a PS/2 keyboard and mouse.

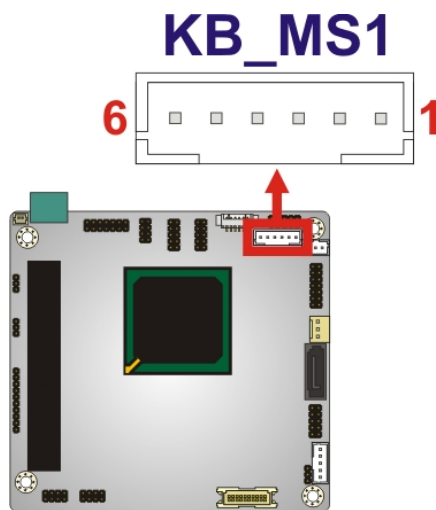


Figure 3-9: Keyboard/Mouse Connector Location

| Pin | Description |
|-----|--------------|
| 1 | +5 V KB DATA |
| 2 | MS DATA |
| 3 | MS CLK |
| 4 | KB DATA |
| 5 | KB CLK |
| 6 | GROUND |

Table 3-8: Keyboard/Mouse Connector Pinouts

3.2.8 LAN Connector

- CN Label:** LAN1
- CN Type:** 14-pin header (2x7)
- CN Location:** See **Figure 3-10**
- CN Pinouts:** See **Table 3-9**

Use LAN cable to connect to LAN1 connector to provide gigabit LAN connection.

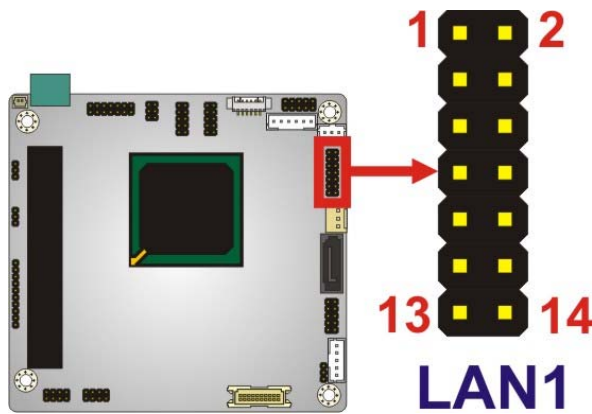


Figure 3-10: LAN Connector Location

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | MDX0+ | 2 | MDX0- |
| 3 | MDX1+ | 4 | MDX1- |
| 5 | MDX2+ | 6 | MDX2- |
| 7 | MDX3+ | 8 | MDX3- |
| 9 | GND | 10 | GND |
| 11 | LINKLED+ | 12 | LINKLED- |
| 13 | SPEEDLED | 14 | SPEEDLED2 |

Table 3-9: LAN Connector Pinouts

3.2.9 LVDS LCD Connector

- CN Label:** LVDS1
- CN Type:** 20-pin crimp (2x10)
- CN Location:** See **Figure 3-11**
- CN Pinouts:** See **Table 3-10**

The LVDS connector is for an LCD panel connected to the board.

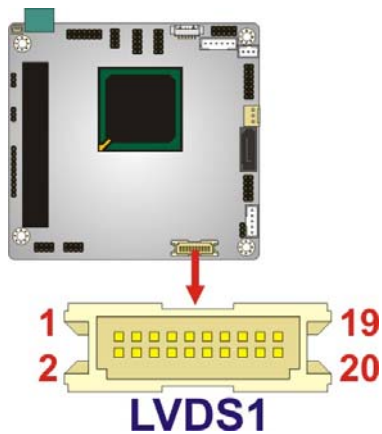


Figure 3-11: LVDS Connector Location

| Pin | Description | Pin | Description |
|-----|--------------|-----|--------------|
| 1 | GROUND | 2 | GROUND |
| 3 | LVDSA_DATA0+ | 4 | LVDSA_DATA0- |
| 5 | LVDSA_DATA1+ | 6 | LVDSA_DATA1- |
| 7 | LVDSA_DATA2+ | 8 | LVDSA_DATA2- |
| 9 | LVDSA_CLK+ | 10 | LVDSA_CLK- |
| 11 | N/C | 12 | N/C |
| 13 | GROUND | 14 | GROUND |
| 15 | LDDC_DATA | 16 | LDDC_CLK |
| 17 | VCC_LCD | 18 | VCC_LCD |
| 19 | VCC_LCD | 20 | VCC_LCD |

Table 3-10: LVDS Connector Pinouts

3.2.10 LVDS Backlight Inverter Connector

- CN Label:** **INVERTER1**
- CN Type:** 5-pin wafer (1x5)
- CN Location:** See **Figure 3-12**
- CN Pinouts:** See **Table 3-11**

The backlight inverter connector provides power to an LCD panel.

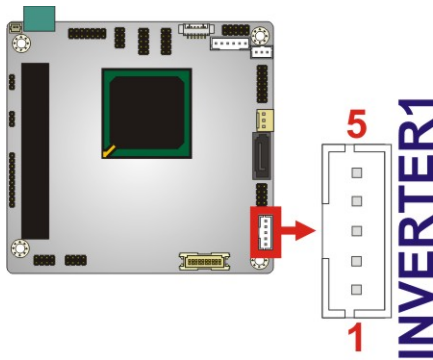


Figure 3-12: Backlight Inverter Connector Location

| Pin | Description |
|-----|------------------|
| 1 | BACKLIGHT ADJUST |
| 2 | GROUND |
| 3 | +12 V |
| 4 | GROUND |
| 5 | BACKLIGHT ENABLE |

Table 3-11: Backlight Inverter Connector Pinouts

3.2.11 PCI-104 Connector

- CN Label:** **PC104_PLUS1**
- CN Type:** PCI-104 connector
- CN Location:** See **Figure 3-13**
- CN Pinouts:** See **Table 3-12**

The PCI-104 connector is for installing a PCI-104 expansion card.

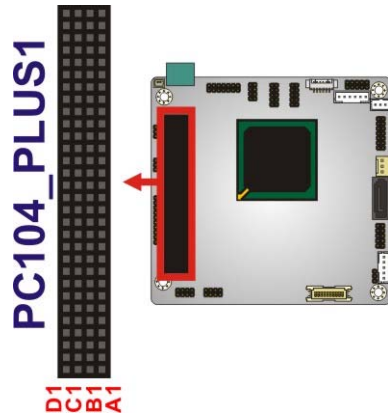


Figure 3-13: PCI-104 Connector Location

| Pin | Row A | Row B | Row C | Row D |
|-----|---------|--------|--------|---------|
| 1 | GND/5 V | TBD1 | 5 V | AD00 |
| 2 | VI/O1 | AD02 | AD01 | +5 V |
| 3 | AD05 | GND | AD04 | AD03 |
| 4 | C/BE0# | AD07 | GND | AD06 |
| 5 | GND | AD09 | AD08 | GND |
| 6 | AD11 | VI/O2 | AD10 | M66EN |
| 7 | AD14 | AD13 | GND | AD12 |
| 8 | +3.3 V | C/BE1# | AD15 | +3.3 V |
| 9 | SERR# | GND | SB0# | PAR |
| 10 | GND | PERR# | +3.3 V | SDONE |
| 11 | STOP# | +3.3 V | LOCK# | GND |
| 12 | +3.3 V | TRDY# | GND | DEVSEL# |
| 13 | FRAME# | GND | IRDY# | +3.3 V |
| 14 | GND | AD16 | +3.3 V | C/BE2# |
| 15 | AD18 | +3.3 V | AD17 | GND |
| 16 | AD21 | AD20 | GND | AD19 |
| 17 | +3.3 V | AD23 | AD22 | +3.3 V |
| 18 | IDSEL0 | GND | IDSEL1 | IDSEL2 |
| 19 | AD24 | C/BE3# | VI/O1 | IDSEL3 |

| Pin | Row A | Row B | Row C | Row D |
|-----|-------|-------|-------|-----------|
| 20 | GND | AD26 | AD25 | GND |
| 21 | AD29 | +5 V | AD28 | AD27 |
| 22 | +5 V | AD30 | GND | AD31 |
| 23 | REQ0# | GND | REQ1# | VI/O2 |
| 24 | GND | REQ2# | +5 V | GNT0# |
| 25 | GNT1# | VI/O3 | GNT2# | GND |
| 26 | +5 V | CLK0 | GND | CLK1 |
| 27 | CLK2 | +5 V | CLK3 | GND |
| 28 | GND | INTD# | +5 V | RST# |
| 29 | +12 V | INTA# | INTB# | INTC# |
| 30 | -12 V | TBD2 | TBD | GND/3.3 V |

Table 3-12: PCI-104 Connector Pinouts

3.2.12 Power Connector

- CN Label:** PWR1
- CN Type:** 3-pin terminal block connector
- CN Location:** See Figure 3-14
- CN Pinouts:** See Table 3-13

The PWR1 connector connects to the power source.

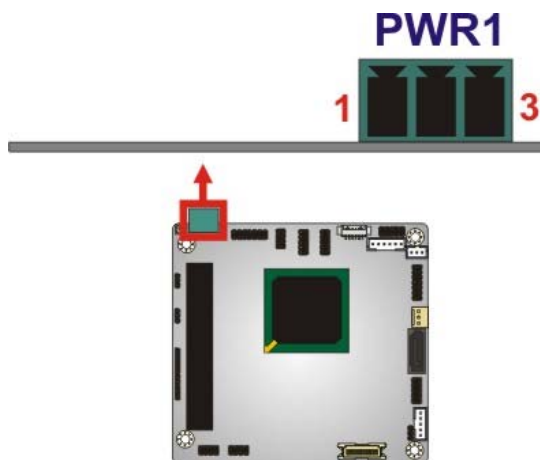


Figure 3-14: Power Connector Location

| Pin | Description |
|-----|-------------|
| 1 | +12 V |
| 2 | GND |
| 3 | +5 V |

Table 3-13: Power Connector Pinouts

3.2.13 SATA Drive Connectors

- CN Label:** SATA1
- CN Type:** 7-pin SATA drive connectors
- CN Location:** See **Figure 3-15**
- CN Pinouts:** See **Table 3-14**

The SATA connectors connect to SATA hard drives or optical drives.

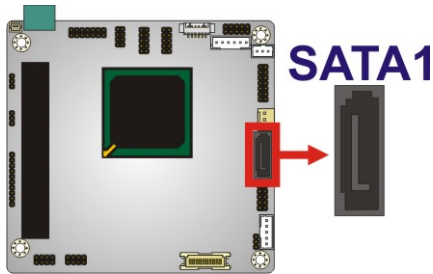


Figure 3-15: SATA Drive Connector Location

| Pin | Description |
|-----|-------------|
| 1 | GND |
| 2 | TX+ |
| 3 | TX- |
| 4 | GND |
| 5 | RX- |
| 6 | RX+ |
| 7 | GND |

Table 3-14: SATA Drive Connector Pinouts

3.2.14 Serial Port Connector (RS-232)

- CN Label:** COM1
- CN Type:** 10-pin header (2x5)
- CN Location:** See **Figure 3-16**
- CN Pinouts:** See **Table 3-15**

This connector provides RS-232 communications.

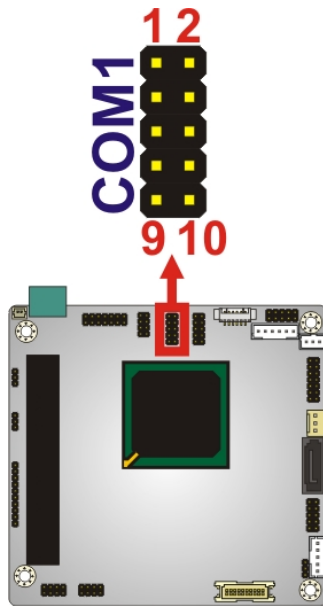


Figure 3-16: Serial Port Connector Location (COM1)

| Pin | Description | Pin | Description |
|-----|---------------------------|-----|-----------------------|
| 1 | Data Carrier Direct (DCD) | 2 | Data Set Ready (DSR) |
| 3 | Receive Data (RXD) | 4 | Request To Send (RTS) |
| 5 | Transmit Data (TXD) | 6 | Clear To Send (CTS) |
| 7 | Data Terminal Ready (DTR) | 8 | Ring Indicator (RI) |
| 9 | Ground (GND) | 10 | Ground (GND) |

Table 3-15: Serial Port Connector Pinouts (COM1)

3.2.15 Serial Port Connector (RS-232/422/485)

- CN Label:** COM2
- CN Type:** 14-pin header (2x7)
- CN Location:** See **Figure 3-17**
- CN Pinouts:** See **Table 3-16**

Used for RS-232/422/485 communications.

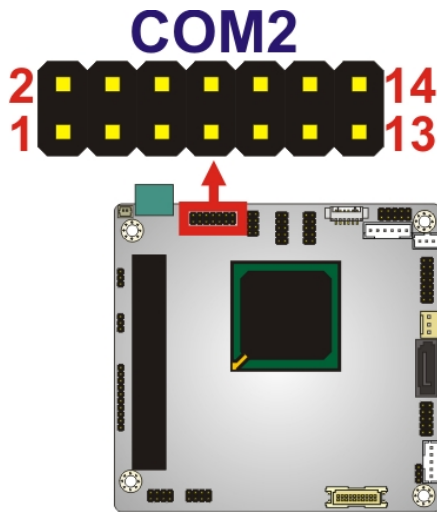


Figure 3-17: Serial Port Connector Location (COM2)

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | DCD | 2 | DSR |
| 3 | RXD | 4 | RTS |
| 5 | TXD | 6 | CTS |
| 7 | DTR | 8 | RI |
| 9 | GND | 10 | GND |
| 11 | TXD485+ | 12 | TXD485- |
| 13 | RXD485+ | 14 | RXD485- |

Table 3-16: Serial Port Connector Pinouts (COM2)

3.2.16 USB Connector

- CN Label:** USB01, USB23
- CN Type:** 8-pin header (2x4)
- CN Location:** See **Figure 3-18**
- CN Pinouts:** See **Table 3-17**

The USB connectors connect to USB devices. Each pin header provides two USB ports.

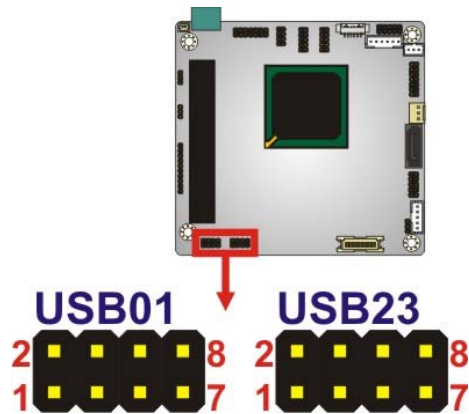


Figure 3-18: USB Connector Pinout Locations

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | VCC | 2 | GND |
| 3 | DATAN- | 4 | DATA1M+ |
| 5 | DATAN+ | 6 | DATAM- |
| 7 | GND | 8 | VCC |

Table 3-17: USB Port Connector Pinouts

3.2.17 VGA Connector

- CN Label:** VGA1
- CN Type:** 10-pin header (2x5)
- CN Location:** See **Figure 3-19**
- CN Pinouts:** See **Table 3-18**

The VGA connector connects to a monitor.

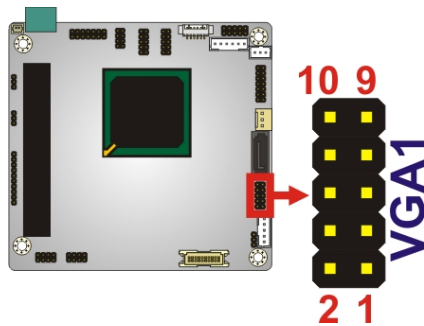


Figure 3-19: VGA Connector Location

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | L_RED | 2 | 5 V_DDCLK |
| 3 | L_GREEN | 4 | 5 V_DDCDA |
| 5 | L_BLUE | 6 | GND |
| 7 | 5 VHSYNC | 8 | GND |
| 9 | 5 VVSYNC | 10 | CRT_PLUG# |

Table 3-18: VGA Connector Pinouts

Chapter

4

Installation

4.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the PM-PV-N4551/D5251 may result in permanent damage to the PM-PV-N4551/D5251 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the PM-PV-N4551/D5251. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the PM-PV-N4551/D5251 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the PM-PV-N4551/D5251, place it on an anti-static pad. This reduces the possibility of ESD damaging the PM-PV-N4551/D5251.
- **Only handle the edges of the PCB:** When handling the PCB, hold the PCB by the edges.

4.2 Installation Considerations



NOTE:

The following installation notices and installation considerations should be read and understood before the PM-PV-N4551/D5251 is installed. All installation notices should be strictly adhered to. Failing to adhere to these precautions may lead to severe damage of the PM-PV-N4551/D5251 and injury to the person installing the motherboard.

4.2.1 Installation Notices



WARNING:

The installation instructions described in this manual should be carefully followed in order to prevent damage to the PM-PV-N4551/D5251, PM-PV-N4551/D5251 components and injury to the user.

Before and during the installation please **DO** the following:

- Read the user manual:
 - The user manual provides a complete description of the PM-PV-N4551/D5251 installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
 - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the PM-PV-N4551/D5251 on an antistatic pad:
 - When installing or configuring the motherboard, place it on an antistatic pad. This helps to prevent potential ESD damage.
- Turn all power to the PM-PV-N4551/D5251 off:

- When working with the PM-PV-N4551/D5251, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the PM-PV-N4551/D5251 **DO NOT:**

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

4.2.2 Installation Checklist

The following checklist is provided to ensure the PM-PV-N4551/D5251 is properly installed.

- All the items in the packing list are present
- A compatible memory module is properly inserted into the slot
- The CF Type I or CF Type II card is properly installed into the CF socket
- The jumpers have been properly configured
- The PM-PV-N4551/D5251 is inserted into a chassis with adequate ventilation
- The correct power supply is being used
- The following devices are properly connected
 - SATA drive
 - RS-232 devices
 - RS-422/485 devices
 - Keyboard and mouse
 - LAN
 - LCD backlight
 - Power
 - LVDS LCD screen
 - VGA display
 - USB port

**WARNING:**

A CPU should never be turned on without its heat sink being installed. If the heat sink is removed and the system turned on, permanent damage to the CPU, PM-PV-N4551/D5251 and other electronic components attached to the system may be incurred. Running a CPU without a heat sink may also result in injury to the user.

4.3 Unpacking

When the PM-PV-N4551/D5251 is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 4.1**.
 - Make sure the packing box is facing upwards so the PM-PV-N4551/D5251 does not fall out of the box.
 - Make sure all the components in the unpacking list are present.
-

**NOTE:**

If some of the components listed in the unpacking list are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the PM-PV-N4551/D5251 from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@ieiworld.com.

4.4 SO-DIMM Installation

To install an SO-DIMM, please follow the steps below and refer to Figure 4-1.

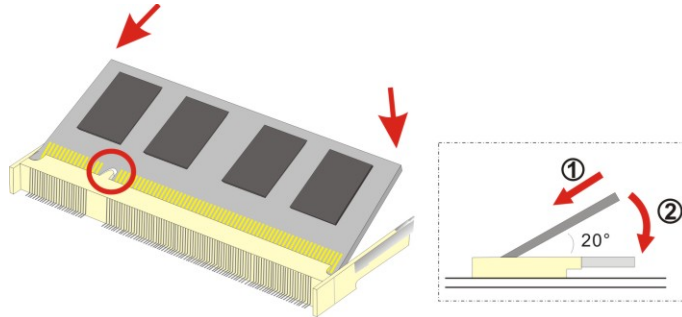


Figure 4-1: SO-DIMM Installation

- Step 1:** Locate the SO-DIMM socket. Place the board on an anti-static mat.
- Step 2:** Align the SO-DIMM with the socket. Align the notch on the memory with the notch on the memory socket.
- Step 3:** Insert the SO-DIMM. Push the memory in at a 20° angle. (See Figure 4-1)
- Step 4:** Seat the SO-DIMM. Gently push downwards and the arms clip into place. (See Figure 4-1)

4.5 CompactFlash® Card Installation

A CompactFlash® Type II (CF Type II) card slot is located on the solder side of the CPU board. When appropriately formatted, a CF Type II card can serve as a bootable hard drive in applications where installation space is limited. The CF Type II card occupies a secondary IDE channel. Configuration options can be found through the BIOS configuration utility.

To install a CF Type II card, follow the instructions below.

- Step 1:** Turn the CPU board over so that the CF Type II card socket is facing up.
- Step 2:** Gently push the CF Type II card into the socket until it clicks into place. (See Figure 4-2)

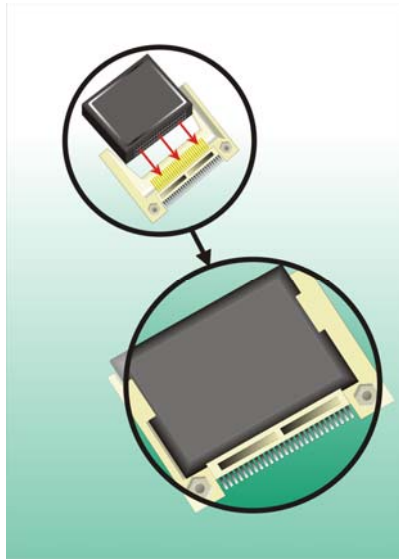



Figure 4-2: CompactFlash® Card Installation

4.6 Jumper Settings



NOTE:

A jumper is a metal bridge that is used to close an electrical circuit. It consists of two metal pins and a small metal clip (protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

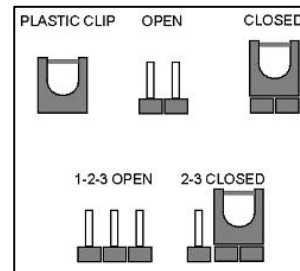

Before the PM-PV-N4551/D5251 is installed in the system, the jumpers must be set in accordance with the desired configuration. There are three jumpers on the PM-PV-N4551/D5251. These three jumpers are listed in the table below.

| Connector | Type | Label |
|------------------------------|--------------|---------|
| AT/ATX Power Mode Jumper | 3-pin header | JP1 |
| Clear CMOS Jumper | 3-pin header | J_CMOS1 |
| CompactFlash® Setup | 3-pin header | JP3 |
| LVDS Voltage Selection | 3-pin header | J_LVDS1 |
| PCI-104 Voltage Setup | 3-pin header | JP3 |
| COM 2 Function Select Jumper | 6-pin header | JP1 |

Table 4–1: Jumper Settings

4.6.1 AT/ATX Power Mode Jumper

- Jumper Label:** ATXCTL1
- Jumper Type:** 3-pin header
- Jumper Settings:** See Table 4-2
- Jumper Location:** See Figure 4-3

The AT Power Select jumper specifies the systems power mode as AT or ATX.

| Setting | Description |
|---------|---------------|
| 2-3 | Use AT power |
| Open | Use ATX power |

Table 4-2: AT/ATX Power Mode Jumper Settings

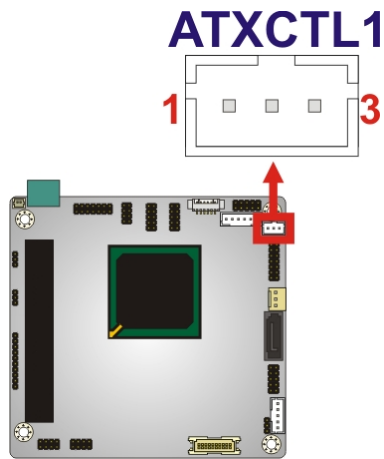


Figure 4-3: AT/ATX Power Mode Jumper Location

4.6.2 Clear CMOS Jumper

- Jumper Label:** J_CMOS1
- Jumper Type:** 3-pin header
- Jumper Settings:** See Table 4-3
- Jumper Location:** See Figure 4-4

To reset the BIOS, move the jumper to the "Clear BIOS" position for 3 seconds or more, then move back to the default position.

| Setting | Description |
|---------|-------------------------|
| 1-2 | Keep current BIOS setup |
| 2-3 | Clear BIOS |

Table 4-3: Clear BIOS Jumper Settings

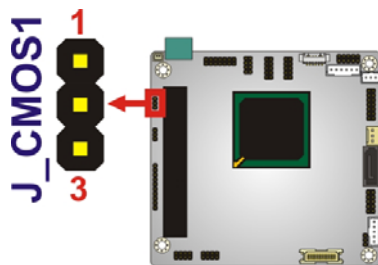


Figure 4-4: Clear BIOS Jumper Location

4.6.3 CompactFlash® Setup

- Jumper Label:** SW_CF1
- Jumper Type:** switch
- Jumper Settings:** See Table 4-4
- Jumper Location:** See Figure 4-5

The CompactFlash® slot is connected through an IDE connection. This switch sets the CompactFlash® card as the master or slave IDE device.

| Setting | Description |
|---------------------------------------|-------------|
| Default position (marked on board) | Slave |
| Other position | Master |

Table 4-4: CompactFlash® Setup Jumper Settings

SW_CF1

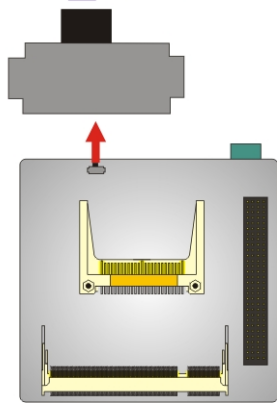


Figure 4-5: CompactFlash® Setup Jumper Location

4.6.4 LVDS Voltage Selection



WARNING:

Incorrect voltages can destroy the LCD panel. Make sure to select a voltage that matches the voltage required by the LCD panel.

- Jumper Label:** J_VLVDS1
- Jumper Type:** 3-pin header
- Jumper Settings:** See Table 4-5
- Jumper Location:** See Figure 4-6

The LCD voltage selection jumper sets the voltage of the power supplied to the LCD panel.

| Setting | Description |
|---------|-------------|
| 1-2 | +3.3 V |
| 2-3 | +5.0 V |

Table 4-5: LVDS Voltage Selection Jumper Settings

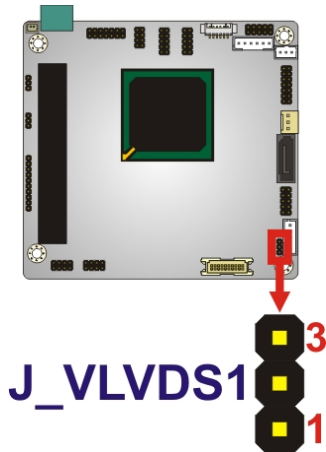


Figure 4-6: LVDS Voltage Selection Jumper Locations

4.6.5 PCI-104 Voltage Setup

- Jumper Label:** JP1
- Jumper Type:** 3-pin header
- Jumper Settings:** See Table 4-6
- Jumper Location:** See Figure 4-7

This jumper selects the voltage supplied to the PCI-104 expansion module.

| Setting | Description |
|---------|-------------|
| 1-2 | +5.0 V |
| 2-3 | +3.3 V |

Table 4-6: PCI-104 Voltage Jumper Settings

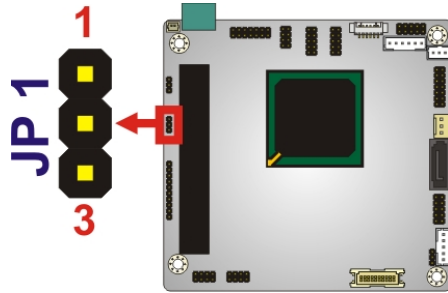


Figure 4-7: PCI-104 Voltage Jumper Location

4.6.6 COM 2 Function Select Jumper

- Jumper Label:** JP2
- Jumper Type:** 6-pin header
- Jumper Settings:** See Table 4-7
- Jumper Location:** See Figure 4-8

The COM 2 Function Select jumper sets the communication protocol used by the second serial communications port (COM 2) as RS-232, RS-422 or RS-485.

| Setting | Description |
|---------|-------------|
| 1-2 | RS-232 |
| 3-4 | RS-422 |
| 5-6 | RS-485 |

Table 4-7: COM 2 Function Select Jumper Settings

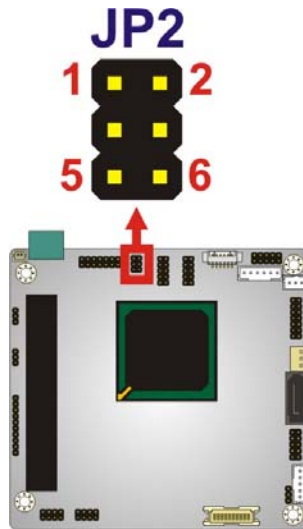


Figure 4-8: COM 2 Function Select Jumper Location

4.7 Chassis Installation



WARNING:

Airflow is critical to the cooling of the CPU and other onboard components. The chassis in which the PM-PV-N4551/D5251 must have air vents to allow cool air to move into the system and hot air to move out.

The PM-PV-N4551/D5251 must be installed in a chassis with ventilation holes on the sides allowing air to flow through the heat sink surface. In a system with an individual power supply unit, the power supply cooling fan can help generate airflow through the board surface.

**NOTE:**

IEI has a wide range of backplanes available. Please contact your vendor, reseller or an IEI sales representative at sales@ieiworld.com or visit the IEI website (<http://www.ieiworld.com>) to find out more about the available chassis.

4.8 Internal Peripheral Device Connections

This section describes the installation of various peripheral connectors available for the PM-PV-N4551/D5251.

4.8.1 Keyboard/Mouse Y-cable Connector

The PM-PV-N4551/D5251 is shipped with a keyboard/mouse Y-cable connector. The keyboard/mouse Y-cable connector connects to a keyboard/mouse connector on the PM-PV-N4551/D5251 and branches into two cables that are each connected to a PS/2 connector, one for a mouse and one for a keyboard. To connect the keyboard/mouse Y-cable connector, please follow the steps below.

- Step 1:** Locate the connector. The location of the keyboard/mouse Y-cable connector is shown in Section 3.1.1.
- Step 2: Align the connectors.** Correctly align pin 1 on the cable connector with pin 1 on the PM-PV-N4551/D5251 keyboard/mouse connector. See **Figure 4-9**.
- Step 3: Insert the cable connectors** Once the cable connector is properly aligned with the keyboard/mouse connector on the PM-PV-N4551/D5251, connect the cable connector to the onboard connectors. See **Figure 4-9**.

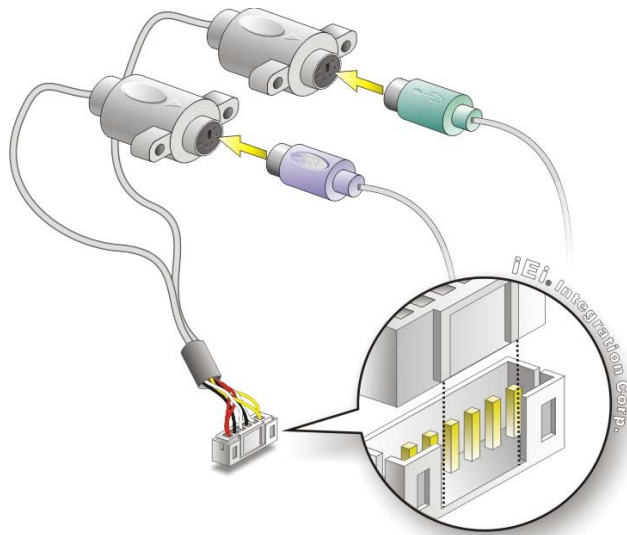


Figure 4-9: Keyboard/mouse Y-cable Connection

- Step 4:** **Attach PS/2 connectors to the chassis.** The keyboard/mouse Y-cable connector is connected to two PS/2 connectors. To secure the PS/2 connectors to the chassis please refer to the installation instructions that came with the chassis.
- Step 5:** **Connect the keyboard and mouse.** Once the PS/2 connectors are connected to the chassis, a keyboard and mouse can each be connected to one of the PS/2 connectors. The keyboard PS/2 connector and mouse PS/2 connector are both marked. Please make sure the keyboard and mouse are connected to the correct PS/2 connector.

4.8.2 LVDS LCD Installation

The PM-PV-N4551/D5251 can be connected to a TFT LCD screen through the 30-pin LVDS crimp connector on the board. To connect a TFT LCD to the PM-PV-N4551/D5251, please follow the steps below.

- Step 1:** **Locate the connector.** The location of the LVDS connector is shown in **Chapter 3.**

Step 2: Insert the cable connector. Insert the connector from the LVDS PCB driving board to the LVDS connector as shown in **Figure 4-10**. When connecting the connectors, make sure the pins are properly aligned.



WARNING:

The diagram below is merely for illustration. The configuration and connection of the cables from the TFT LCD screen being installed may be different. Please refer to the installation manual that came with the TFT LCD screen.

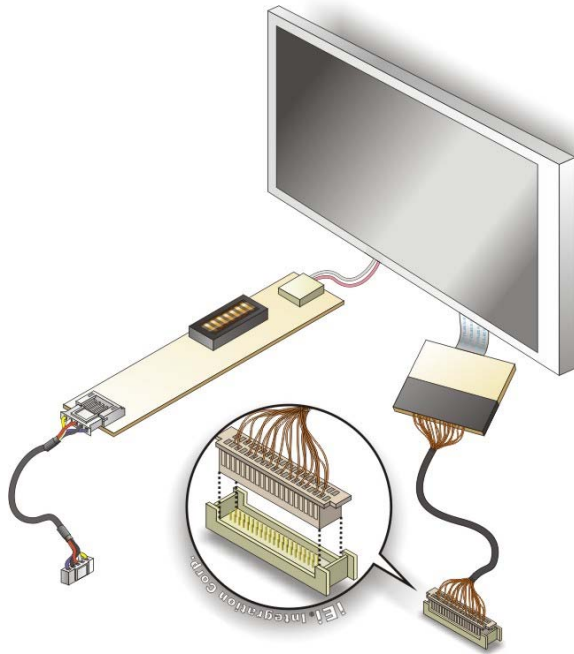


Figure 4-10: LVDS Connector

Step 3: Locate the backlight inverter connector. The location of the backlight inverter connector is shown in **Chapter 3**.

Step 4: Connect backlight connector. Connect the backlight connector to the driver TFT LCD PCB as shown in **Figure 4-11**. When inserting the cable connector, make sure the pins are properly aligned.

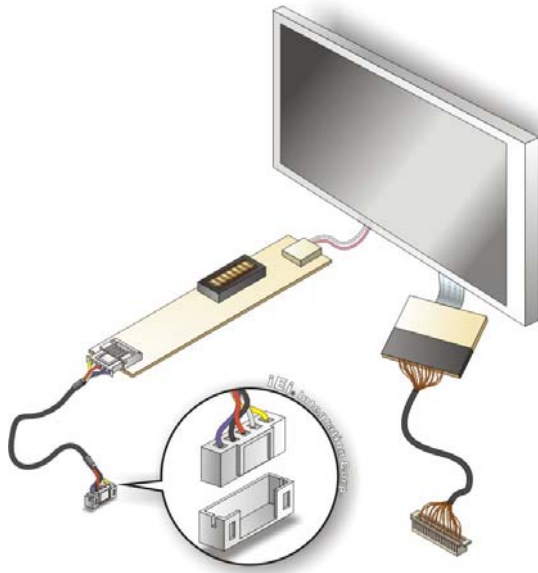


Figure 4-11: Backlight Inverter Connection

4.8.3 SATA Drive Connection

The PM-PV-N4551/D5251 is shipped with one SATA drive cable. To connect the SATA drive to the connector, please follow the steps below.

Step 1: Locate the connector. The location of the SATA drive connector is shown in **Chapter 3**.

Step 2: Insert the cable connector. Insert the cable connector into the on-board SATA drive connector until it clips into place. See Figure 4-12.

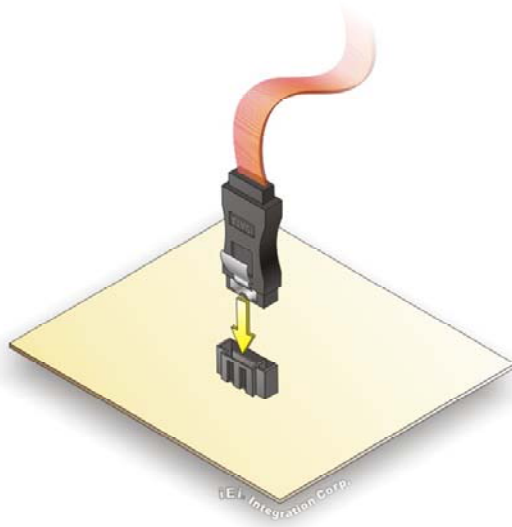


Figure 4-12: SATA Drive Cable Connection

Step 3: Connect the cable to the SATA disk. Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See Figure 4-13.

Step 4: Connect the SATA power cable. Connect the SATA power connector to the back of the SATA drive. See Figure 4-13.

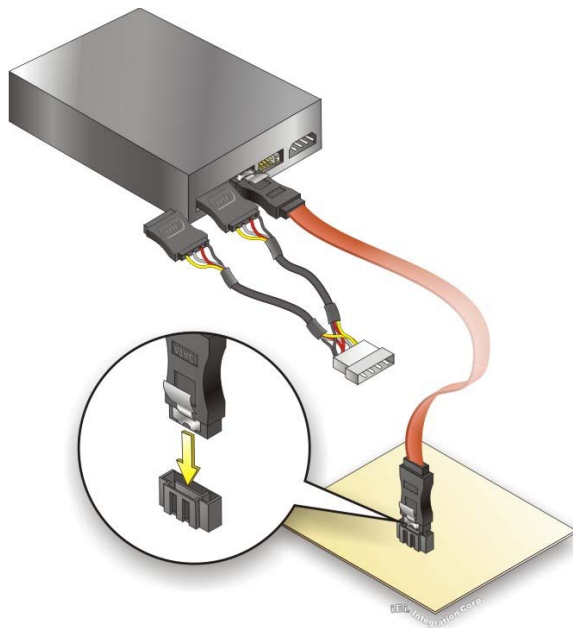


Figure 4-13: SATA Power Drive Connection

4.8.4 USB Cable

The PM-PV-N4551/D5251 is shipped with a dual port USB 2.0 cable. To connect the USB cable connector, please follow the steps below.

Step 1: Locate the connectors. The locations of the USB connectors are shown in Chapter 3.



WARNING:

If the USB pins are not properly aligned, the USB device can burn out.

Step 2: Align the connectors. The cable has two connectors. Correctly align pin 1 on each cable connector with pin 1 on the PM-PV-N4551/D5251 USB connector.

Step 3: Insert the cable connectors. Once the cable connectors are properly aligned with the USB connectors on the PM-PV-N4551/D5251, connect the cable connectors to the on-board connectors. See **Figure 4-14**.

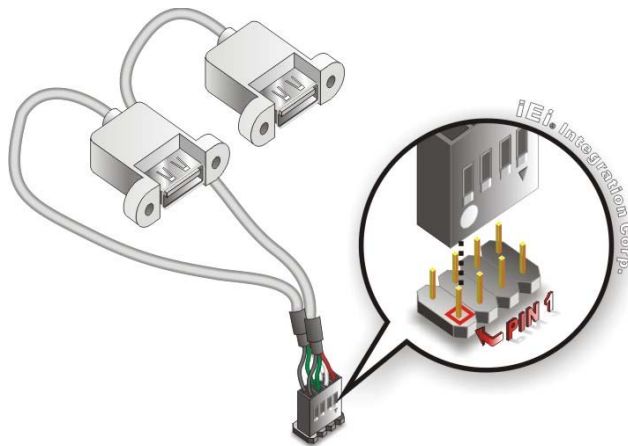


Figure 4-14: Dual USB Cable Connection

Step 4: Attach the USB connectors to the chassis. The USB 2.0 connectors each of two retention screw holes. To secure the connectors to the chassis please refer to the installation instructions that came with the chassis.

4.9 Software Installation

All the drivers for the PM-PV-N4551/D5251 are on the CD that came with the system. To install the drivers, please follow the steps below.

Step 1: Insert the CD into a CD drive connected to the system.



NOTE:

If the installation program doesn't start automatically:
Click "Start->My Computer->CD Drive->autorun.exe"

Step 2: The driver main menu appears (**Figure 4-15**).

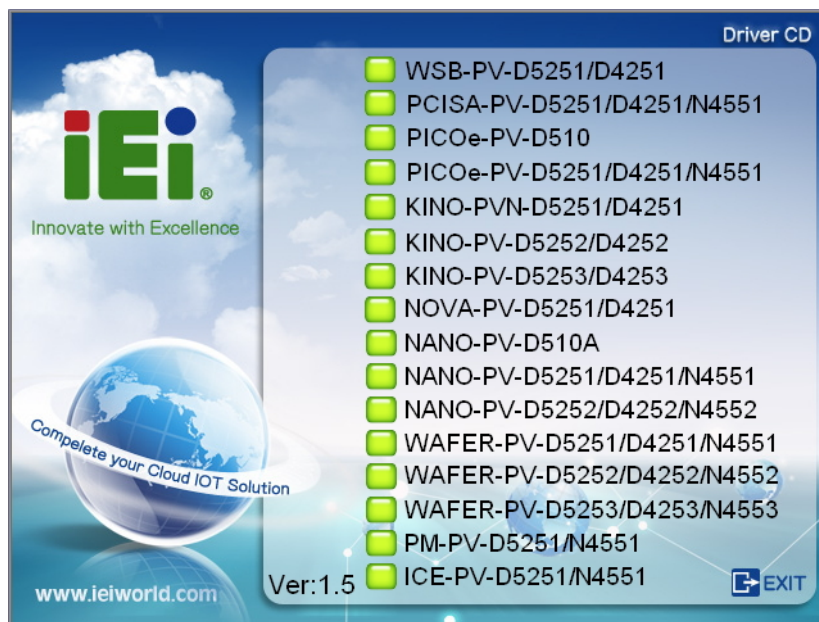


Figure 4-15: Introduction Screen

Step 3: Click **PM-PV-D5251/N4551**.

Step 4: Select OS.

Step 5: A new screen with a list of available drivers appears (**Figure 4-16**).



Figure 4-16: Available Drivers

Step 6: Install all of the necessary drivers in this menu.

Chapter

5

BIOS

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

5.1.1 Starting Setup

The AMI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DELETE** key as soon as the system is turned on or
2. Press the **DELETE** key when the “**Press Del to enter SETUP**” message appears on the screen.

If the message disappears before the **DELETE** key is pressed, restart the computer and try again.

5.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **ESC** to quit. Navigation keys are shown in.

| Key | Function |
|-------------|---|
| Up arrow | Move to previous item |
| Down arrow | Move to next item |
| Left arrow | Move to the item on the left hand side |
| Right arrow | Move to the item on the right hand side |

| Key | Function |
|---------|--|
| F1 key | General help, only for Status Page Setup Menu and Option Page Setup Menu |
| F2 key | Load previous values. |
| F3 key | Load optimized defaults |
| F4 key | Save all the CMOS changes |
| Esc key | Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu |

Table 5-1: BIOS Navigation Keys

5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

5.1.4 Unable to Reboot After Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in Chapter 4.

5.1.5 BIOS Menu Bar


The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Boot – Changes the system boot configuration.
- Security – Sets User and Supervisor Passwords.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

5.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

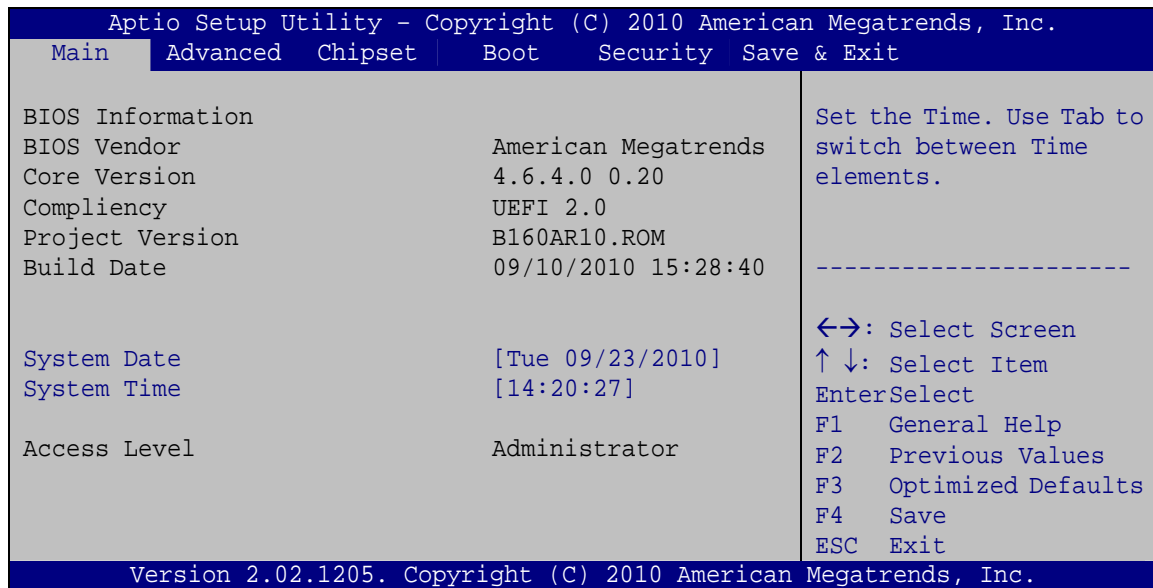

BIOS Menu 1: Main

→ BIOS Information

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- **BIOS Vendor:** Installed BIOS vendor
- **Core Version:** Current BIOS version
- **Project Version:** the board version
- **Build Date:** Date the current BIOS version was made

The System Overview field also has two user configurable fields:

→ System Date [xx/xx/xx]

Use the **System Date** option to set the system date. Manually enter the day, month and year.

→ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.


5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



WARNING!


Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

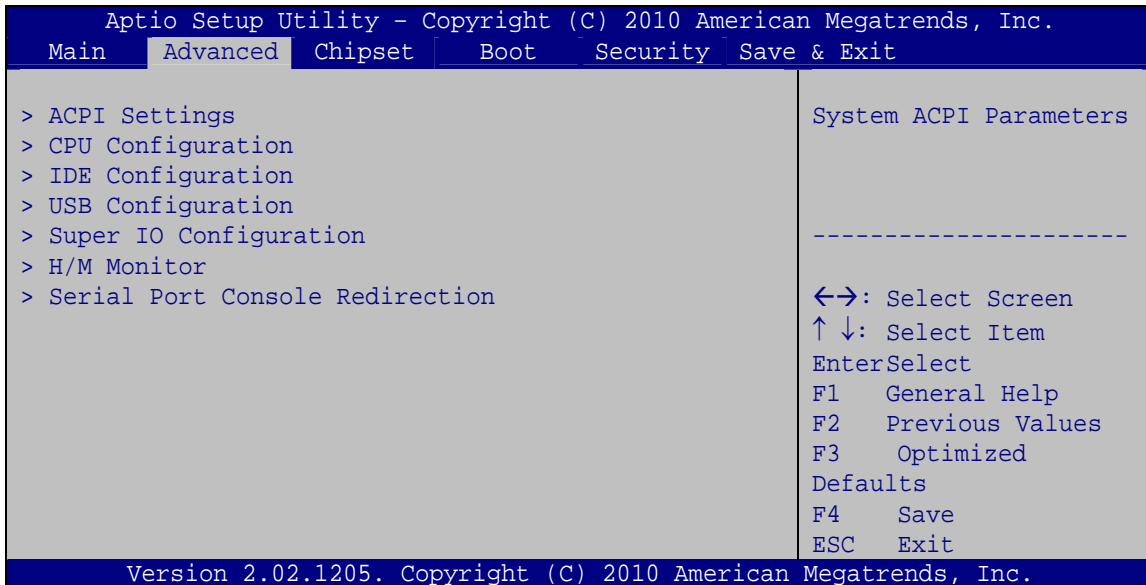

BIOS Menu 2: Advanced

5.3.1 ACPI Settings

The **ACPI Settings** menu (**BIOS Menu 3**) configures the Advanced Configuration and Power Interface (ACPI) options.

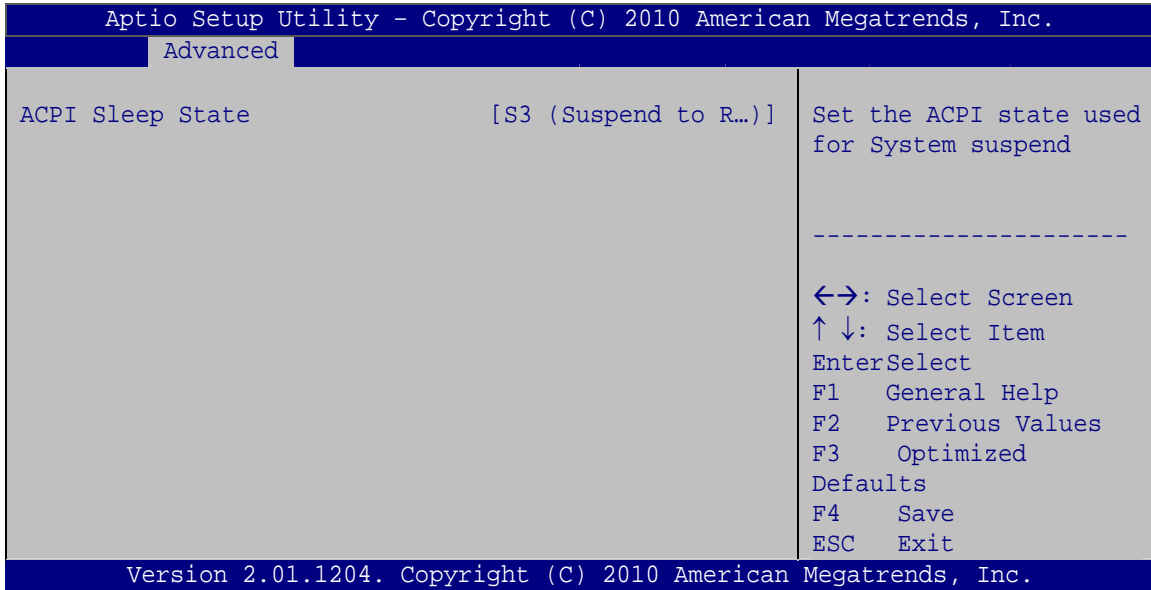

BIOS Menu 3: ACPI Settings

➔ **ACPI Sleep State [S3 (Suspend to RAM)]**

Use the **ACPI Sleep State** option to specify the sleep state the system enters when it is not being used.

➔ **Suspend Disabled**

➔ **S1 (CPU Stop Clock)**


The system enters S1(POS) sleep state. The system appears off. The CPU is stopped; RAM is refreshed; the system is running in a low power mode.

➔ **S3 (Suspend to DEFAULT RAM)**

The caches are flushed and the CPU is powered off. Power to the RAM is maintained. The computer returns slower to a working state, but more power is saved.

5.3.2 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 4**) to view detailed CPU specifications and configure the CPU.

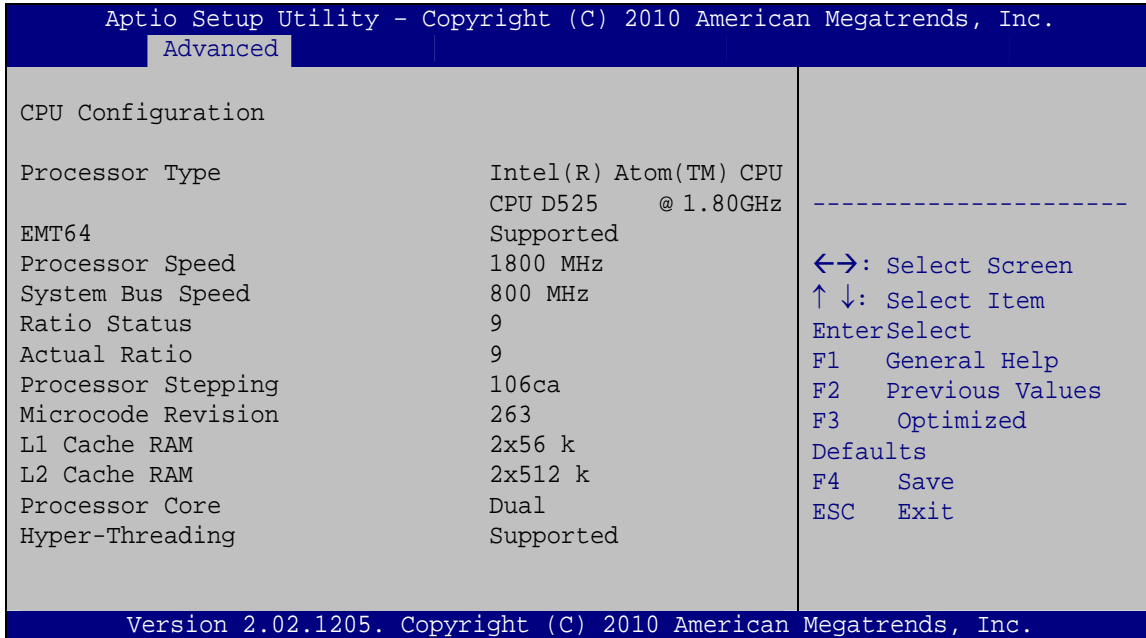


BIOS Menu 4: CPU Configuration

The CPU Configuration menu (**BIOS Menu 4**) lists the following CPU details:

- Processor Type: Lists the brand name of the CPU being used
- EMT64: Indicates if the EM64T is supported by the CPU.
- Processor Speed: Lists the CPU processing speed
- System Bus: Lists the system bus
- Ratio Status: List the maximum FSB divisor
- Actual Ratio: Lists current FSB divisor
- Processor Stepping: Lists the CPU processing stepping
- Microcode Revision: Lists the microcode revision
- L1 Cache RAM: Lists the CPU L1 cache size
- L2 Cache RAM: Lists the CPU L2 cache size
- Processor Core: Lists the number of the processor core
- Hyper-Threading: Indicates if the Intel Hyper-Threading Technology is supported by the CPU.

5.3.3 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 5**) to change and/or set the configuration of the SATA devices installed in the system.

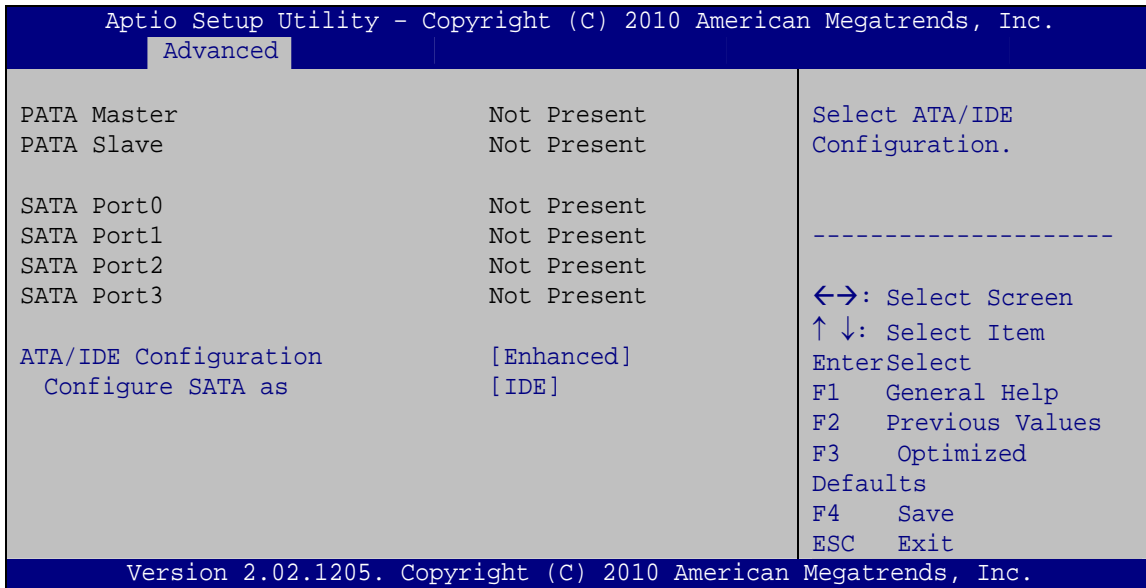

BIOS Menu 5: IDE Configuration

→ ATA/IDE Configurations [Enhanced]

Use the **ATA/IDE Configurations** option to configure the ATA/IDE controller.

- **Disabled** Disables the on-board ATA/IDE controller.
- **Compatible** Configures the on-board ATA/IDE controller to be in compatible mode. In this mode, a SATA channel will replace one of the IDE channels. This mode supports up to 4 storage devices.
- **Enhanced DEFAULT** Configures the on-board ATA/IDE controller to be in Enhanced mode. In this mode, IDE channels and SATA channels are separated. This mode supports up to 6 storage devices. Some legacy OS do not support this mode.


→ **Configure SATA as [IDE]**

Use the **Configure SATA as** option to configure SATA devices as normal IDE devices.

- **IDE** **DEFAULT** Configures SATA devices as normal IDE device.
- **AHCI** Configures SATA devices as AHCI device.

5.3.4 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 6**) to read USB configuration information and configure the USB settings.

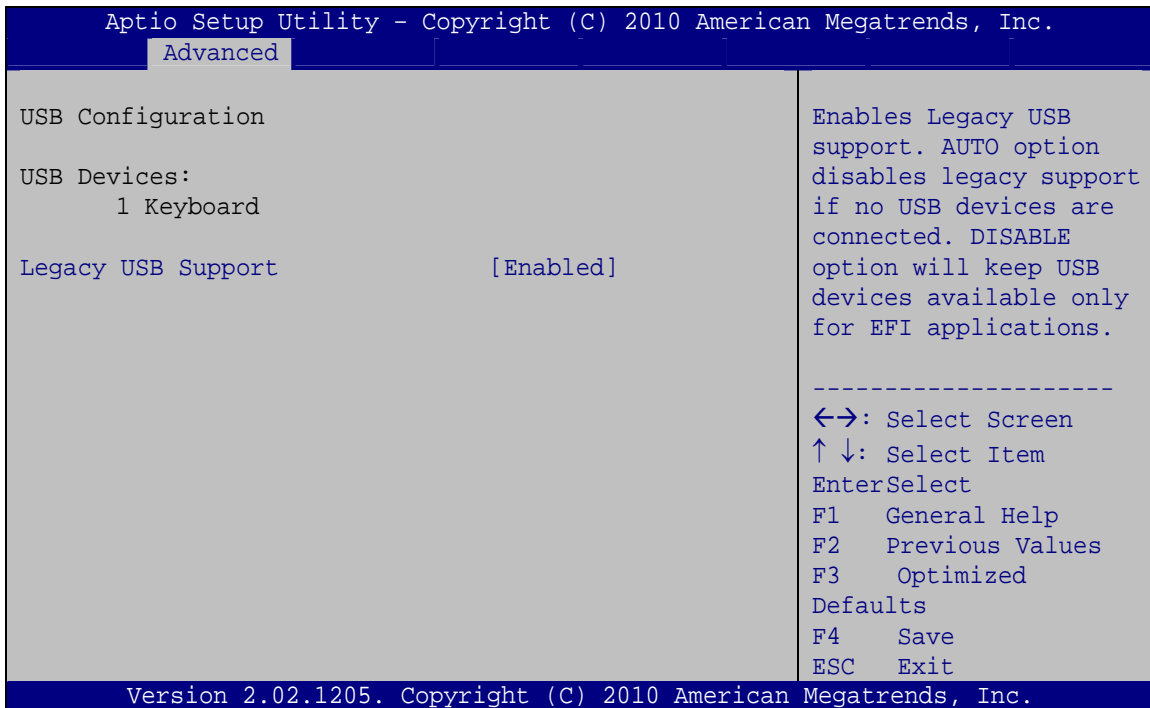

BIOS Menu 6: USB Configuration

→ **USB Devices**

The **USB Devices Enabled** field lists the USB devices that are enabled on the system

PM-PV-N4551/D5251 User Manual

→ Legacy USB Support [Enabled]

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support. Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

- **Enabled** **DEFAULT** Legacy USB support enabled
- **Disabled** Legacy USB support disabled
- **Auto** Legacy USB support disabled if no USB devices are connected

5.3.5 Super IO Configuration

Use the **Super IO Configuration** menu (**BIOS Menu 7**) to set or change the configurations for the FDD controllers, parallel ports and serial ports.

```

Aptio Setup Utility - Copyright (C) 2010 American Megatrends, Inc.
  Advanced
-----
Super IO Configuration
Super IO Chip                      ITE IT8718F
> Serial Port 0 Configuration
> Serial Port 1 Configuration

Set Parameters of Serial
Port 0 (COMA)


-----
←→: Select Screen
↑ ↓: Select Item
Enter>Select
F1    General Help
F2    Previous Values
F3    Optimized
      Defaults
F4    Save
ESC   Exit

Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.
  
```

BIOS Menu 7: Super IO Configuration

5.3.5.1 Serial Port n Configuration

Use the **Serial Port n Configuration** menu (**BIOS Menu 8**) to configure the serial port n.

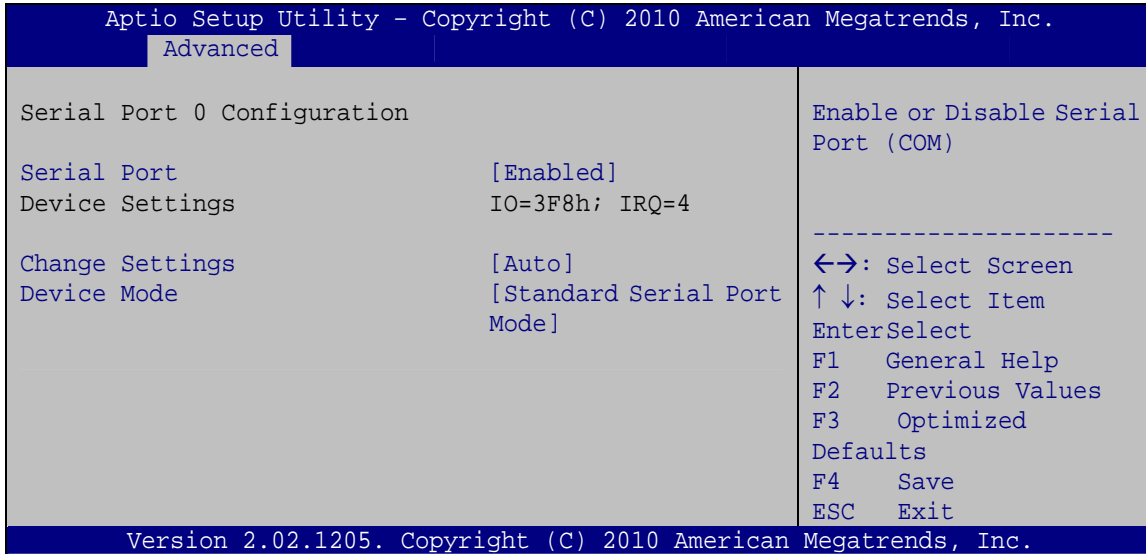

BIOS Menu 8: Serial Port n Configuration Menu

5.3.5.1.1 Serial Port 0 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

→ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **Auto** **DEFAULT** The serial port IO port address and interrupt address are automatically detected.
- **IO=3F8h;**
IRQ=4 Serial Port I/O port address is 3F8h and the interrupt address is IRQ4

- ➔ **IO=3F8h;** Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4, 5, 6, 7, 10, 11, 12
IRQ=3, 4,
5, 6, 7, 10,
11, 12
- ➔ **IO=2F8h;** Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4, 5, 6, 7, 10, 11, 12
IRQ=3, 4,
5, 6, 7, 10,
11, 12
- ➔ **IO=3E8h;** Serial Port I/O port address is 3E8h and the interrupt address is IRQ3, 4, 5, 6, 7, 10, 11, 12
IRQ=3, 4,
5, 6, 7, 10,
11, 12
- ➔ **IO=2E8h;** Serial Port I/O port address is 2E8h and the interrupt address is IRQ3, 4, 5, 6, 7, 10, 11, 12
IRQ=3, 4,
5, 6, 7, 10,
11, 12

➔ **Serial Port1 Mode [Standard Serial Port Mode]**

Use the **Serial Port1 Mode** option to select the transmitting and receiving mode for the first serial port.

- ➔ **Standard Serial Port Mode** **DEFAULT** Serial Port 1 mode is standard
- ➔ **IrDA 1.0** Serial Port 1 mode is IrDA 1.0 (HP SIR)
- ➔ **ASKIR Mode** Serial Port 1 mode is ASK IR

5.3.5.1.2 Serial Port 1 Configuration

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled** **DEFAULT** Enable the serial port

→ **Change Settings [Auto]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **Auto** **DEFAULT** The serial port IO port address and interrupt address are automatically detected.
- **IO=2F8h;
IRQ=3** Serial Port I/O port address is 2F8h and the interrupt address is IRQ3
- **IO=3F8h;
IRQ=3, 4,
5, 6, 7, 10,
11, 12** Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4, 5, 6, 7, 10, 11, 12
- **IO=2F8h;
IRQ=3, 4,
5, 6, 7, 10,
11, 12** Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4, 5, 6, 7, 10, 11, 12
- **IO=3E8h;
IRQ=3, 4,
5, 6, 7, 10,
11, 12** Serial Port I/O port address is 3E8h and the interrupt address is IRQ3, 4, 5, 6, 7, 10, 11, 12
- **IO=2E8h;
IRQ=3, 4,
5, 6, 7, 10,
11, 12** Serial Port I/O port address is 2E8h and the interrupt address is IRQ3, 4, 5, 6, 7, 10, 11, 12

→ **Serial Port1 Mode [Standard Serial Port Mode]**

Use the **Serial Port1 Mode** option to select the transmitting and receiving mode for the first serial port.

- **Standard Serial Port Mode** **DEFAULT** Serial Port 1 mode is standard
- **IrDA 1.0** Serial Port 1 mode is IrDA 1.0 (HP SIR)
- **ASKIR Mode** Serial Port 1 mode is ASK IR

5.3.6 H/W Monitor

The H/W Monitor menu (**BIOS Menu 9**) shows the operating temperature, fan speeds and system voltages.

```

Aptio Setup Utility - Copyright (C) 2010 American Megatrends, Inc.
-----
Advanced
-----
PC Health Status

CPU Smart Fan control          [Automatic Mode]
CPU Temperature Limit of OFF   60
CPU Temperature Limit of ON   40
CPU_Fan1 Start PWM            70
Slope PWM                      [0.5   PWM]

CPU Core1 Temperature          :+39 C
CPU Core2 Temperature          :+39 C
System Temperature             :+40 C
CPU_FAN1 Speed                 :4950 RPM
CPU core                       :+1.152 V
+1.05V                         :+1.056 V
+3.00V                         :+3.328 V
+5.00V                         :+4.945 V
+12.0V                         :+12.096 V
+1.5V_DDR3                     :+1.504 V
+1.5V                          :+1.408 V
5VSB                           :+4.972 V
VBAT                           :+3.264 V

-----
<->: Select Screen
↑ ↓: Select Item
Enter>Select
F1   General Help
F2   Previous Values
F3   Optimized
Defaults
F4   Save
ESC  Exit

Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.
    
```

BIOS Menu 9: Hardware Health Configuration

→ PC Health Status

The following system parameters and values are shown. The system parameters that are monitored are:

- System Temperatures:
 - CPU Core1 Temperature
 - CPU Core2 Temperature
 - System Temperature
- Fan Speeds:
 - CPU Fan Speed
- Voltages:

- CPU core
- 1.05V
- 3.00V
- 5.00V
- 12.0V
- 1.5VDDR3
- 1.5V
- 5VSB
- VBAT

➔ **CPU_FAN1 Mode Setting [Full On Mode]**

Use the **Mode Setting** option to configure the second fan.

- ➔ **Full On Mode** **DEFAULT** Fan is on all the time
- ➔ **Automatic mode** The fan adjusts its speed using these settings:
 - CPU Temperature Limit of OFF
 - CPU Temperature Limit of ON
 - CPU_Fan1 Start PWM
 - Slope PWM
- ➔ **PWM Manual mode** The fan spins at the speed set in:
 - CPU_Fan1 PWM control

➔ **CPU Temperature Limit of OFF [030]**



WARNING:

CPU failure can result if this value is set too high

The fan will turn off if the temperature falls below this value.

- Minimum Value: 0°C
- Maximum Value: 127°C

→ CPU Temperature Limit of ON [040]**WARNING:**

CPU failure can result if this value is set too high

When the fan is off, it will only start when the temperature exceeds this setting.

- Minimum Value: 0°C
- Maximum Value: 127°C

→ CPU_FAN1 Start PWM [070]

This is the initial speed of the fan when it first starts spinning.

- PWM Minimum Mode: 0
- PWM Maximum Mode: 127

→ Slope PWM [1 PWM]

A bigger value will increase the fan speed in big amounts. A smaller value will increase the speed more gradually.

- 0.125 PWM
- 0.25 PWM
- 0.5 PWM
- 1 PWM
- 2 PWM
- 4 PWM
- 8 PWM
- 16 PWM


→ CPU_Fan1 PWM Control [070]

This value specifies the speed of the fan.

- PWM Minimum Mode: 0
- PWM Maximum Mode: 127

5.3.7 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 10**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

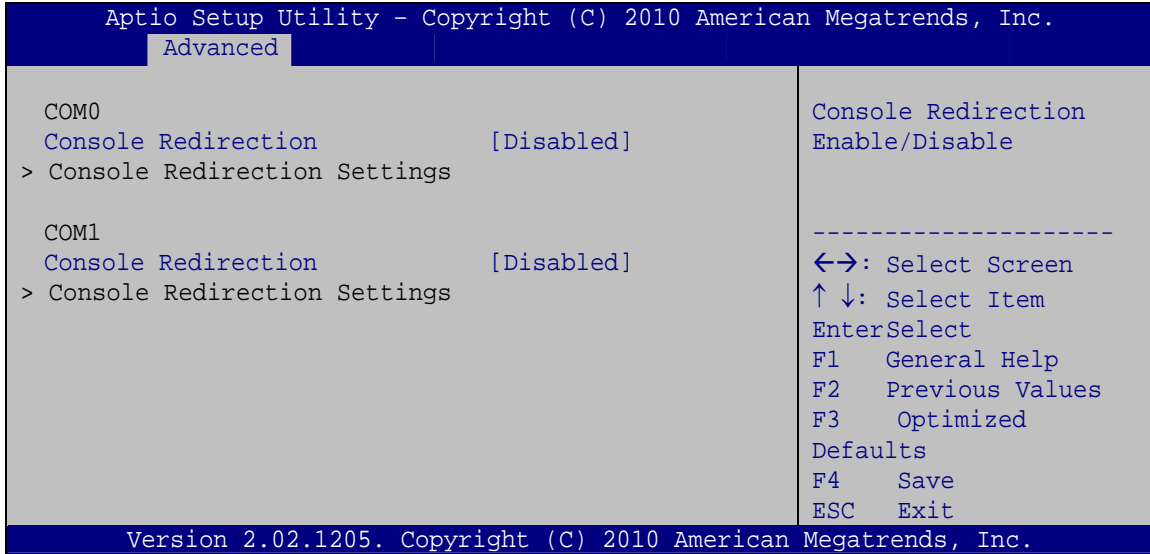

BIOS Menu 10: Serial Port Console Redirection

→ Console Redirection [Disabled]

Use **Console Redirection** option to enable or disable the console redirection function.

- **Disabled** **DEFAULT** Disabled the console redirection function
- **Enabled** Enabled the console redirection function

5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 11**) to access the Northbridge and Southbridge configuration menus



WARNING!

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

```

Aptio Setup Utility - Copyright (C) 2010 American Megatrends, Inc.
Main   Advanced  Chipset  Boot   Security  Save & Exit
-----
> Host Bridge
> South Bridge
> Intel IGD SWSCI OpRegion

North Bridge Parameters
-----
<=>: Select Screen
↑ ↓: Select Item
Enter>Select
F1   General Help
F2   Previous Values
F3   Optimized
Defaults
F4   Save
ESC  Exit

Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.
    
```

BIOS Menu 11: Chipset

5.4.1 Host Bridge Configuration

Use the **Host Bridge Configuration** menu (**BIOS Menu 12**) to configure the Northbridge chipset.

```

Aptio Setup Utility - Copyright (C) 2010 American Megatrends, Inc.
Chipset
-----
> OnChip VGA Configuration
  Initate Graphic Adapter      [IGD]
                                Select which graphics
                                controller to use as the
                                primary boot device.

***** Memory Information *****
Memory Frequency                800 Mhz

Total Memory                    1024 MB

DIMM#0                          1024 MB
DIMM#1                          Not Present


-----
<=>: Select Screen
↑ ↓: Select Item
Enter>Select
F1   General Help
F2   Previous Values
F3   Optimized
Defaults
F4   Save
ESC  Exit

Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.
  
```

BIOS Menu 12: Host Bridge Chipset Configuration

5.4.1.1 OnChip VGA Configuration

Use the **OnChip VGA Configuration** menu (**BIOS Menu 12**) to configure the OnChip VGA.

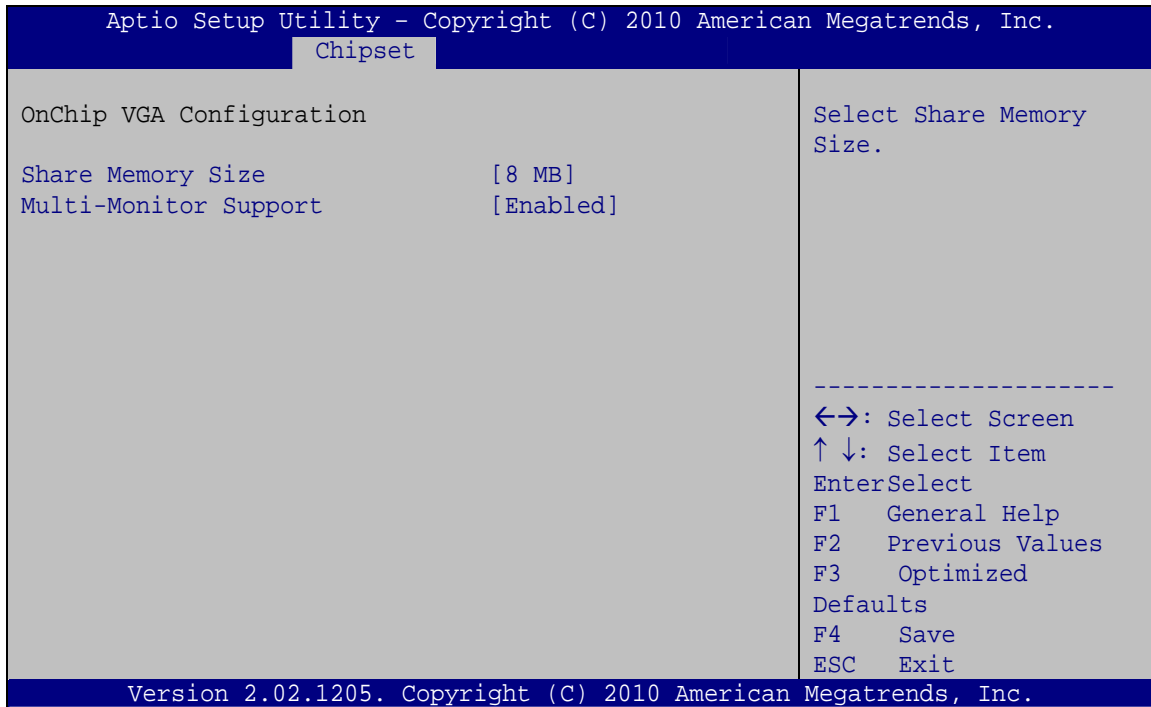

BIOS Menu 13: OnChip VGA Configuration

→ Share Memory Size [8 MB]

Use the **Share Memory Size** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

- Disabled
- 1 MB
- 8 MB **Default**

→ Multi-Monitor Support [Enabled]

Use **Multi-Monitor Support** option to enable or disable the multi-monitor function.

- ➔ Disabled Disabled the multi-monitor function
- ➔ Enabled **DEFAULT** Enabled the multi-monitor function


➔ **Initiate Graphic Adapter**

Use the **Initiate Graphic Adapter** option to select the graphics controller used as the primary boot device. Select either an integrated graphics controller (IGD) or a combination of PCI graphics controller or an IGD. Configuration options are listed below:

- IGD **DEFAULT**
- PCI/IGD

5.4.2 South Bridge Configuration

Use the **South Bridge Configuration** menu (**BIOS Menu 14**) to configure the Southbridge chipset.

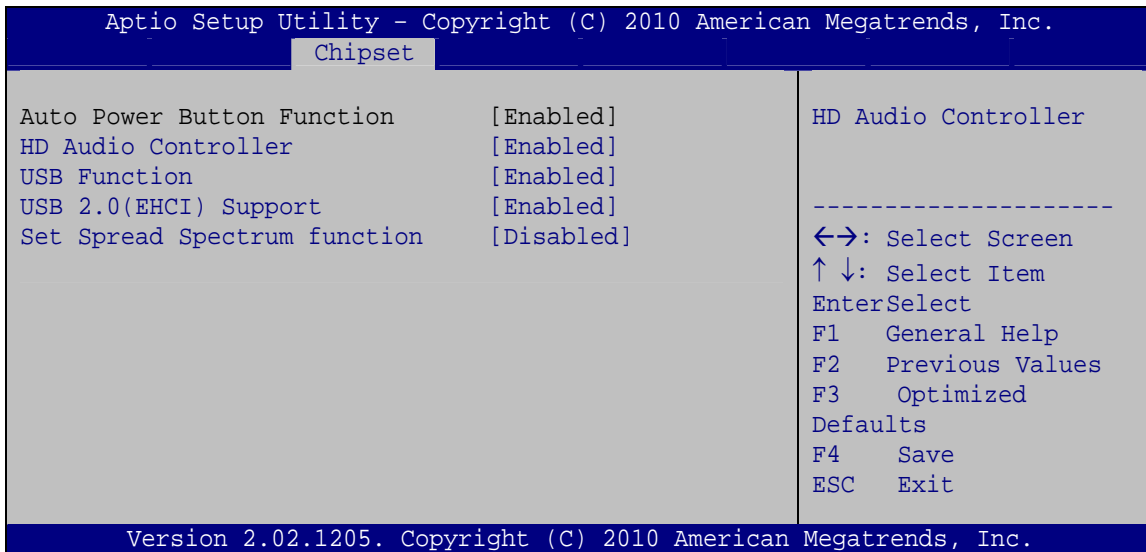

BIOS Menu 14:South Bridge Chipset Configuration

➔ **HD Audio Controller [Enabled]**

Use the **HD Audio Controller** option to enable or disable the High Definition Audio controller.

PM-PV-N4551/D5251 User Manual

→ **Enabled** **DEFAULT** The onboard High Definition Audio controller automatically detected and enabled

→ **Disabled** The onboard High Definition Audio controller is disabled

→ **USB Function [Enabled]**

Use the **USB Function** BIOS option to enable or disable USB function support.

→ **Disabled** USB function support disabled

→ **Enabled** **DEFAULT** USB function support enabled

→ **USB 2.0 (EHCI) Support [Enabled]**

Use the **USB 2.0 (EHCI) Support** BIOS option to enable or disable USB 2.0 support.

→ **Enabled** **DEFAULT** USB 2.0 (EHCI) support enabled

→ **Disabled** USB 2.0 (EHCI) support disabled

→ **Set Spread Spectrum Function [Disabled]**


The **Set Spread Spectrum Function** option can help to improve CPU EMI issues.

→ **Disabled** **DEFAULT** The spread spectrum mode is disabled

→ **Enabled** The spread spectrum mode is enabled

5.4.3 Intel IGD SWSCI OpRegion

Use the **Intel IGD SWSCI OpRegion** menu to configure the video device connected to the system.

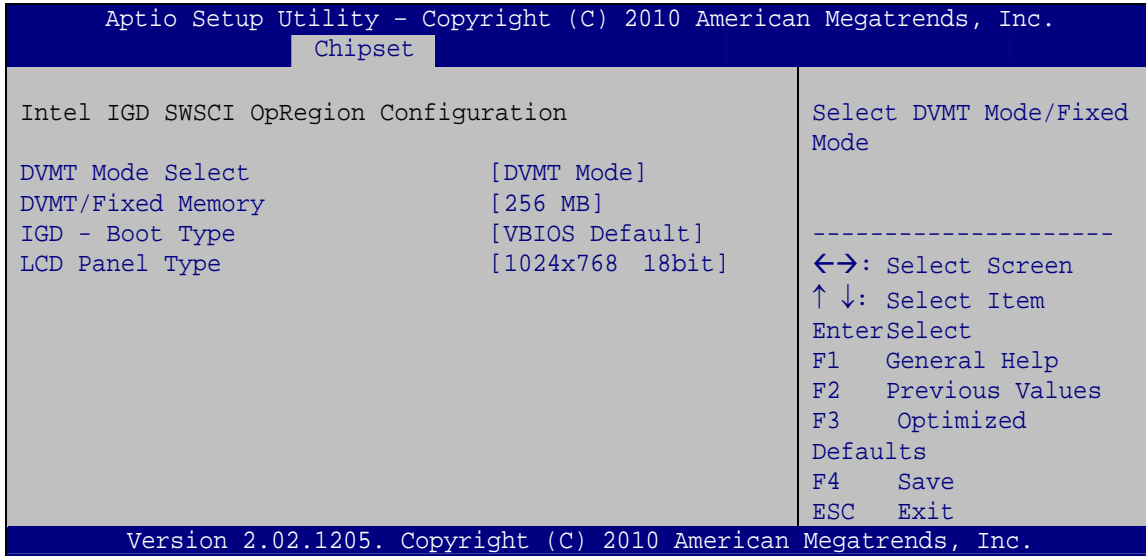

BIOS Menu 15:South Bridge Chipset Configuration

→ **DVMT Mode Select [DVMT Mode]**

Use the **DVMT Mode Select** option to select the Intel Dynamic Video Memory Technology (DVMT) operating mode.

- **Fixed Mode** A fixed portion of graphics memory is reserved as graphics memory.
- **DVMT Mode** **DEFAULT** Graphics memory is dynamically allocated according to the system and graphics needs.

→ **DVMT/FIXED Memory [256 MB]**

Use the **DVMT/FIXED Memory** option to specify the maximum amount of memory that can be allocated as graphics memory. Configuration options are listed below.

- 128 MB
- 256 MB **Default**
- Maximum

→ **IGD - Boot Type [VBIOS Default]**

Use the **IGD - Boot Type** option to select the display device used by the system when it boots. Configuration options are listed below.

PM-PV-N4551/D5251 User Manual

- VBIOS Default **DEFAULT**
- CRT
- LFP
- CRT + LFP


→ LCD Panel Type [Select by Panel ID]

Use the **LCD Panel Type** option to select the type of flat panel connected to the system. Configuration options are listed below.

- 640x480 18bit
- 800x480 18bit
- 800x600 18bit
- 1024x768 18bit **DEFAULT**
- 1280x1024 18bit
- 1366x768 18bit
- 1280x800 18bit
- 1280x600 18bit

5.5 Boot

Use the **Boot** menu (**BIOS Menu 16**) to configure system boot options.

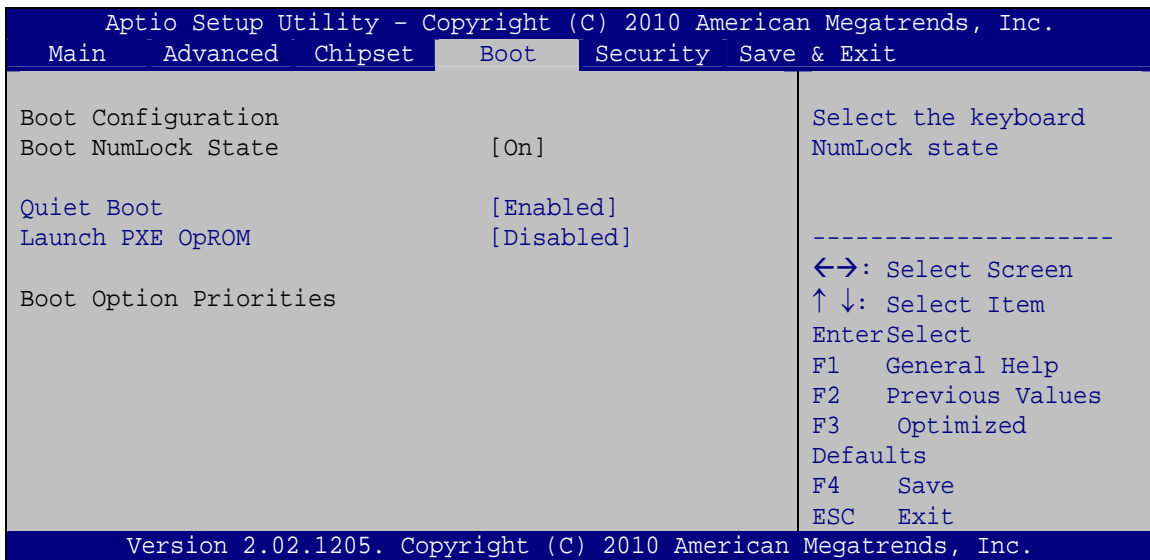

BIOS Menu 16: Boot

→ Bootup NumLock State [On]

Use the **Bootup NumLock State** BIOS option to specify if the number lock setting must be modified during boot up.

- | | | |
|-------|---------|--|
| → On | DEFAULT | Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit. |
| → Off | | Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged. |

→ Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- | | | |
|------------|---------|---|
| → Disabled | | Normal POST messages displayed |
| → Enabled | DEFAULT | OEM Logo displayed instead of POST messages |


→ Launch PXE OpROM [Disabled]

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

- | | | |
|------------|---------|----------------------------|
| → Disabled | DEFAULT | Ignore all PXE Option ROMs |
| → Enabled | | Load PXE Option ROMs. |

5.6 Security

Use the **Security** menu (**BIOS Menu 17**) to set system and user passwords.

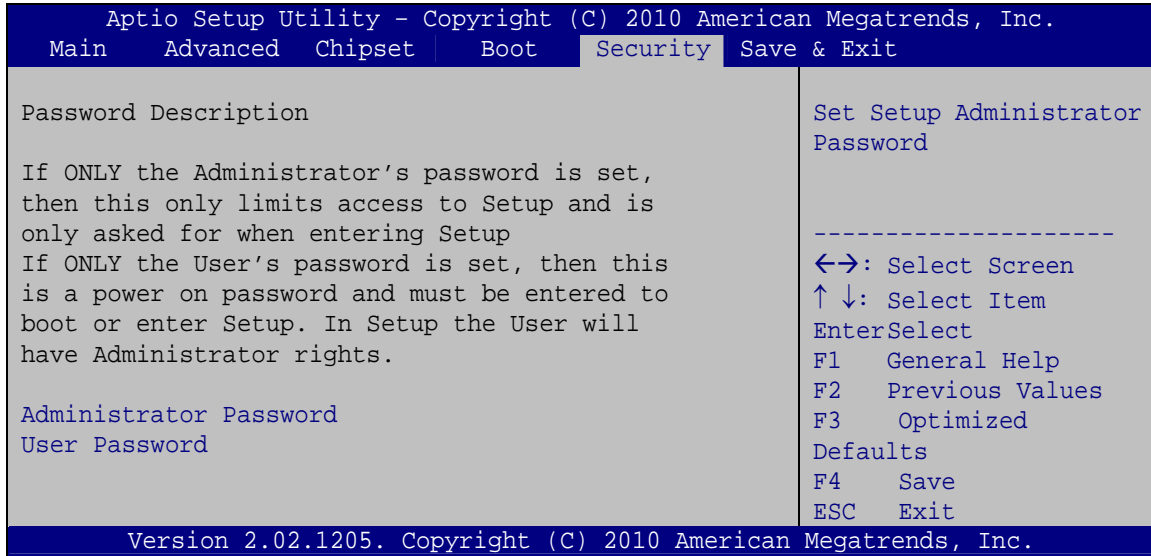

BIOS Menu 17: Security

→ Administrator Password

Use the **Administrator Password** to set or change a administrator password.

→ User Password

Use the **User Password** to set or change a user password.

5.7 Exit

Use the **Exit** menu (**BIOS Menu 18**) to load default BIOS values, optimal failsafe values and to save configuration changes.

```
Aptio Setup Utility - Copyright (C) 2010 American Megatrends, Inc.
Main  Advanced  Chipset  Boot  Security  Save & Exit

Save Changes and Reset
Discard Changes and Reset

Restore Defaults
Save as User Defaults
Restore User Defaults

Exit system setup after
saving the changes.

-----
<->: Select Screen
↑ ↓: Select Item
Enter>Select
F1  General Help
F2  Previous Values
F3  Optimized
Defaults
F4  Save
ESC Exit

Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.
```

BIOS Menu 18:Exit

→ Save Changes and Reset

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

→ Discard Changes and Reset

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

→ Restore Defaults

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

PM-PV-N4551/D5251 User Manual

→ Save as User Defaults

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ Restore User Defaults

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY



This equipment has been tested and found to comply with specifications for CE marking. If the user modifies and/or installs other devices in the equipment, the CE conformity declaration may no longer apply.

FCC WARNING



This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Appendix

B


Product Disposal

**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union – If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union – The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

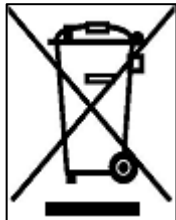

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your device, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

Appendix

C

BIOS Options

Below is a list of BIOS configuration options in the BIOS chapter.

| | |
|--|-----------|
| BIOS Information | 59 |
| System Date [xx/xx/xx] | 59 |
| System Time [xx:xx:xx] | 60 |
| ACPI Sleep State [S3 (Suspend to RAM)] | 61 |
| ATA/IDE Configurations [Enhanced] | 63 |
| Configure SATA as [IDE] | 64 |
| USB Devices | 64 |
| Legacy USB Support [Enabled] | 65 |
| Serial Port [Enabled] | 66 |
| Change Settings [Auto] | 66 |
| Serial Port1 Mode [Standard Serial Port Mode] | 67 |
| Serial Port [Enabled] | 67 |
| Change Settings [Auto] | 68 |
| Serial Port1 Mode [Standard Serial Port Mode] | 68 |
| PC Health Status | 69 |
| CPU_FAN1 Mode Setting [Full On Mode] | 70 |
| CPU Temperature Limit of OFF [030] | 70 |
| CPU Temperature Limit of ON [040] | 71 |
| CPU_FAN1 Start PWM [070] | 71 |
| Slope PWM [1 PWM] | 71 |
| CPU_Fan1 PWM Control [070] | 71 |
| Console Redirection [Disabled] | 72 |
| Share Memory Size [8 MB] | 75 |
| Multi-Monitor Support [Enabled] | 75 |
| Initiate Graphic Adapter | 76 |
| HD Audio Controller [Enabled] | 76 |
| USB Function [Enabled] | 77 |
| USB 2.0 (EHCI) Support [Enabled] | 77 |
| Set Spread Spectrum Function [Disabled] | 77 |
| DVMT Mode Select [DVMT Mode] | 78 |
| DVMT/FIXED Memory [256 MB] | 78 |
| IGD - Boot Type [VBIOS Default] | 78 |
| LCD Panel Type [Select by Panel ID] | 79 |

| | |
|-----------------------------------|----|
| Bootup NumLock State [On]..... | 80 |
| Quiet Boot [Enabled] | 80 |
| Launch PXE OpROM [Disabled] | 80 |
| Administrator Password | 81 |
| User Password | 81 |
| Save Changes and Reset | 82 |
| Discard Changes and Reset | 82 |
| Restore Defaults | 82 |
| Save as User Defaults | 83 |
| Restore User Defaults | 83 |

Appendix

D

Terminology

| | |
|----------------------|---|
| AC '97 | Audio Codec 97 (AC'97) refers to a codec standard developed by Intel® in 1997. |
| ACPI | Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface. |
| AHCI | Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface. |
| ATA | The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer. |
| ARMD | An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives. |
| ASKIR | Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude (“volume”) of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1. |
| BIOS | The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user |
| CODEC | The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system. |
| CompactFlash® | CompactFlash® is a solid-state storage device. CompactFlash® devices use flash memory in a standard size enclosure. Type II is thicker than Type I, but a Type II slot can support both types. |
| CMOS | Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors. |
| COM | COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DB-9 connector. |
| DAC | The Digital-to-Analog Converter (DAC) converts digital signals to analog signals. |
| DDR | Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal. |

PM-PV-N4551/D5251 User Manual

| | |
|-----------------|--|
| DMA | Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory. |
| DIMM | Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module. |
| DIO | The digital inputs and digital outputs are general control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions. |
| EHCI | The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers. |
| EIDE | Enhanced IDE (EIDE) is a newer IDE interface standard that has data transfer rates between 4.0 MBps and 16.6 MBps. |
| EIST | Enhanced Intel® SpeedStep Technology (EIST) allows users to modify the power consumption levels and processor performance through application software. The application software changes the bus-to-core frequency ratio and the processor core voltage. |
| FSB | The Front Side Bus (FSB) is the bi-directional communication channel between the processor and the Northbridge chipset. |
| GbE | Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gbps and complies with the IEEE 802.3-2005 standard. |
| GPIO | General purpose input |
| HDD | Hard disk drive (HDD) is a type of magnetic, non-volatile computer storage device that stores digitally encoded data. |
| ICH | The Input/Output Control Hub (ICH) is an Intel® Southbridge chipset. |
| IrDA | Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other. |
| L1 Cache | The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor. |
| L2 Cache | The Level 2 Cache (L2 Cache) is an external processor memory cache. |

| | |
|------------------|---|
| LCD | Liquid crystal display (LCD) is a flat, low-power display device that consists of two polarizing plates with a liquid crystal panel in between. |
| LVDS | Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer. |
| POST | The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on. |
| RAM | Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives. |
| SATA | Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA II bus has data transfer speeds of up to 3.0 Gbps. |
| S.M.A.R.T | Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives. |
| UART | Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports. |
| UHCI | The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers. |
| USB | The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates and USB 2.0 supports 480Mbps data transfer rates. |
| VGA | The Video Graphics Array (VGA) is a graphics display system developed by IBM. |

Appendix

E

Digital I/O Interface

E.1 Introduction

The DIO connector on the PM-PV-N4551/D5251 is interfaced to GPIO ports on the Super I/O chipset. The DIO has both 4-bit digital inputs and 4-bit digital outputs. The digital inputs and digital outputs are generally control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.



NOTE:

For further information, please refer to the datasheet for the Super I/O chipset.

The BIOS interrupt call **INT 15H** controls the digital I/O.

INT 15H:

| |
|---|
| AH – 6FH |
| <u>Sub-function:</u> |
| AL – 8 : Set the digital port as INPUT |
| AL : Digital I/O input value |

E.2 Assembly Language Sample 1

```

MOV     AX, 6F08H      ;setting the digital port as input
INT     15H           ;
    
```

AL low byte = value

| |
|---|
| AH – 6FH |
| <u>Sub-function:</u> |
| AL – 9 : Set the digital port as OUTPUT |
| BL : Digital I/O input value |

E.3 Assembly Language Sample 2

```

MOV     AX, 6F09H      ;setting the digital port as output
MOV     BL, 09H        ;digital value is 09H
INT     15H           ;
    
```

Digital Output is 1001b

Appendix

F

Watchdog Timer



NOTE:

The following discussion applies to DOS. Contact IEI support or visit the IEI website for drivers for other operating systems.

The Watchdog Timer is a hardware-based timer that attempts to restart the system when it stops working. The system may stop working because of external EMI or software bugs. The Watchdog Timer ensures that standalone systems like ATMs will automatically attempt to restart in the case of system problems.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

| AH – 6FH Sub-function: | |
|-------------------------------|---|
| AL – 2: | Sets the Watchdog Timer's period. |
| BL: | Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup). |

Table F-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

**NOTE:**

The Watchdog Timer is activated through software. The software application that activates the Watchdog Timer must also deactivate it when closed. If the Watchdog Timer is not deactivated, the system will automatically restart after the Timer has finished its countdown.

EXAMPLE PROGRAM:

```
; INITIAL TIMER PERIOD COUNTER
```

```
;
```

```
W_LOOP:
```

```
;
```

```
MOV      AX, 6F02H      ;setting the time-out value  
MOV      BL, 30         ;time-out value is 48 seconds  
INT      15H
```

```
;
```

```
; ADD THE APPLICATION PROGRAM HERE
```

```
;
```

```
CMP      EXIT_AP, 1     ;is the application over?  
JNE      W_LOOP         ;No, restart the application
```

```
MOV      AX, 6F02H      ;disable Watchdog Timer  
MOV      BL, 0          ;  
INT      15H
```

```
;
```

```
; EXIT ;
```


Appendix

G

Hazardous Materials Disclosure

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the following table.

| Part Name | Toxic or Hazardous Substances and Elements | | | | | |
|-------------------------|--|--------------|--------------|------------------------------|--------------------------------|---------------------------------------|
| | Lead (Pb) | Mercury (Hg) | Cadmium (Cd) | Hexavalent Chromium (CR(VI)) | Polybrominated Biphenyls (PBB) | Polybrominated Diphenyl Ethers (PBDE) |
| Housing | O | O | O | O | O | O |
| Display | O | O | O | O | O | O |
| Printed Circuit Board | O | O | O | O | O | O |
| Metal Fasteners | O | O | O | O | O | O |
| Cable Assembly | O | O | O | O | O | O |
| Fan Assembly | O | O | O | O | O | O |
| Power Supply Assemblies | O | O | O | O | O | O |
| Battery | O | O | O | O | O | O |

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

PM-PV-N4551/D5251 User Manual

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

| 部件名称 | 有毒有害物质或元素 | | | | | |
|--------|-----------|-----------|-----------|-----------------|---------------|---------------------|
| | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (CR(VI)) | 多溴联苯 (PBB) | 多溴二苯 醚 (PBDE) |
| 壳体 | ○ | ○ | ○ | ○ | ○ | ○ |
| 显示 | ○ | ○ | ○ | ○ | ○ | ○ |
| 印刷电路板 | ○ | ○ | ○ | ○ | ○ | ○ |
| 金属螺帽 | ○ | ○ | ○ | ○ | ○ | ○ |
| 电缆组装 | ○ | ○ | ○ | ○ | ○ | ○ |
| 风扇组装 | ○ | ○ | ○ | ○ | ○ | ○ |
| 电力供应组装 | ○ | ○ | ○ | ○ | ○ | ○ |
| 电池 | ○ | ○ | ○ | ○ | ○ | ○ |

○: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求。